

My Muse Pocket is configured in 5.1, but I only get audio out of the FRONT output.

This problem occurs when Windows use the standard USB AUDIO driver instead of the appropriate drivers.

You can check that it is the case from Windows Device Manager:

- Right click on **MY COMPUTER** icon on your desktop and select **Properties**
- If you are using Win 98 or ME: Select the **Device Manager** tab
- If you are using Win 2000 or XP: Select the **Hardware** tab, then click on the **Device Manager** button

Under **SOUND VIDEO AND GAME CONTROLLERS**, you should normally find the following instance:

USB AUDIO DEVICE

- Right click it, and choose **Update Drivers**.
- First select **Install from a list or specific location (Advanced)**,
- Then, select **Do not search; I will choose the driver to install**,

At this point, windows should indicate the compatible drivers available. Obviously, select the Muse Pocket. Complete the installation.

If not, you will need to manually point the Wizard to the folder on your hard drive where the driver installation copied the installation files:

- Click **HAVE DISK**
- Enter the following path:

C:\Windows\inf\HMuse.inf