

How to connect an external audio source to the DJ Console MK2.



Turntables

Turntables usually produce a **Phono level** signal, different than the **Line level** signal given by the majority of audio products. Be sure to set the switch to the right position depending on your turntable output (Check the user manual for more details). The same applies if you are using a phono/Line level converter).

The DJ Console MK2 permits to connect up to two turntables to the inputs in the back of the unit.

If necessary, connect the ground between the DJ console and the turntable.

For Line level devices and Microphones

It is also possible to connect **Line level** sources to the MkII, such as CD, cassette or MP3 players. For these, set the switch to Line-IN.

When looking at the **Console MkII control panel**, you will notice that Input 1-2 is shared with the Microphone connector located on the front of the console. As such, it will not be possible to use BOTH at once. The selection needs to be made from the Control Panel:



We recommend using **dynamic** microphones with the DJ Console. If you wish to use a **condenser** microphone, please note that an external power source will be required as the Console doesn't provide phantom power (+48 V).

Once connected, you can switch between the computer and the external source by pressing the **Audio Source** button on the Console.