

Why do I hear the main mix when I try to listen to the individual decks?

Insure that the **Phone Mix (Ph Mix)** knob in **Traktor 3 LE** is set to **0 %**, otherwise part of the main mix signal will be sent to the headphone output.



Since the **DJ Console MK2** provides a way to listen to individual decks (**A** and **B**), the **Main Mix** or **Split mode**, this functionality is not useful. It is then preferable to set to the Phone Mix to its minimum in order to prevent confusion.