

CONTENTS

1. INTRODUCTION	2
1.1. Box contents	2
1.2. Technical specifications	2
1.3. Recommendations	3
2. INSTALLING YOUR XPS 2.030 DJ CLUB SPEAKER KIT	3
2.1. Positioning the speaker kit	3
2.2. Connections	4
2.2.1. Connection to a PC	5
2.2.2. Connection to a television set equipped with a headphone jack	5
2.2.3. Connection to a DVD player/television set equipped with Left and Right audio outputs	6
2.2.4. Connection to a game console	6
3. USING YOUR XPS 2.030 DJ CLUB SPEAKER KIT	6
4. TECHNICAL SUPPORT	7
5. WARRANTY	8
ADDITIONAL WARRANTY PROVISIONS	8
ENVIRONMENTAL PROTECTION RECOMMENDATION	8

1. INTRODUCTION

1.1. Box contents

- 2 amplified satellite speakers
- 1 male-male mini-jack cable
- User Manual

1.2. Technical specifications

Output power (effective power)	<ul style="list-style-type: none">▪ Satellite speakers: 2 x 5 W RMS
Total power	10 W RMS
Frequency response	<ul style="list-style-type: none">▪ Satellite speakers: 80 Hz – 20 kHz
Magnetic shielding	Magnetic shielding allowing for placement close to a monitor without disturbing the display
Features	<ul style="list-style-type: none">▪ Right speaker:<ul style="list-style-type: none">- 1 RCA type audio output to connect the left speaker- 1 line in connector at the back for the main audio input- 1 auxiliary input and 1 headphone connector on the front of the speaker- 1 volume control knob- 1 treble control knob
For use with	PC, TV sets, DVD players, game consoles, CD-Audio, MP3 players

1.3. Recommendations

- Place your satellite speakers on a flat surface to avoid the risk of the speakers falling.
- Never open up your speaker kit, as you risk damaging its internal components.
- This speaker kit is intended for use in a temperate environment.
- To prevent the risk of fire or electrical discharge, keep your speaker kit away from:
 - rain or humidity, as well as all fluids (water, chemical products or any other liquids),
 - sources of heat such as heaters, stoves or any other heat-producing devices (including amplifiers),
 - direct sunlight.
- Do not expose your speaker kit to drips or splashes of water.
- Never place any object filled with liquid (a glass, vase...) on your speaker kit.
- Unplug the power cable if you do not plan on using your speaker kit for an extended period of time. To disconnect the power cable, take hold of and pull on the plug; never pull on the cable itself.
- Make sure that the speaker kit's power plug connected to an electrical outlet remains easily accessible.
- Disconnect the speaker kit before cleaning. Use a damp cloth and avoid using aerosol cleaners.
- The speaker kit's power plug serves to power off the device and must therefore be easily accessible at all times.
- Attention: at full power, prolonged listening with headphones may cause damage to the user's ears and hearing.
- Markings are located on the back of the speakers.

2. INSTALLING YOUR XPS 2.030 DJ CLUB SPEAKER KIT

 
2.1. Positioning the speaker kit

1. Place the satellite speakers on a desk to either side of your monitor, keeping them at least 50 cm away from the side walls.
2. Place the speakers at an equal distance from the listener and direct them towards the listening position.

2.2. Connections


1. Switch off the audio source (PC, television set, DVD player or game console) to which you wish to connect your speaker kit.

- General connection diagram:

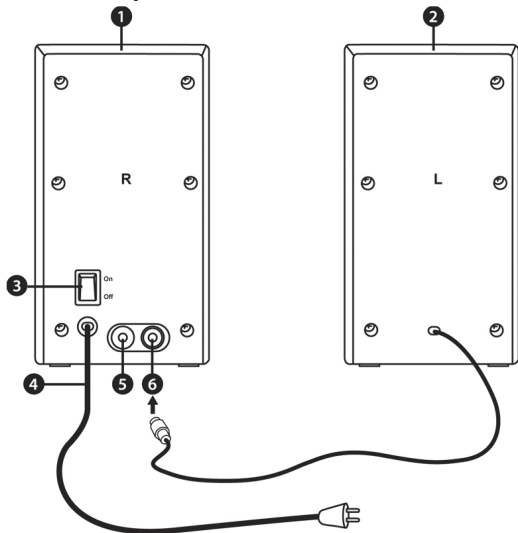

- 1: Right speaker
- 2: Left speaker
- 3: On/Off switch
- 4: Power cable
- 5: Connector for main audio input
- 6: Connector for left satellite speaker

 - Right speaker with controls:

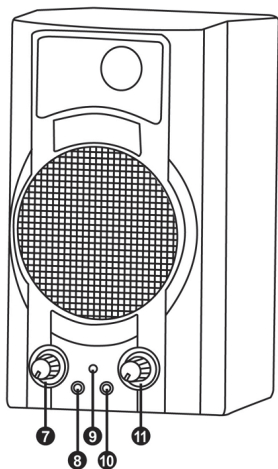

- 7: Volume control knob
- 8: Headphone connector (speakers are automatically disabled when headphones are connected)
- 9: Power LED
- 10: Auxiliary audio input, allowing you to connect an MP3 player or any other audio source
- 11: Treble control knob

2.2.1. Connection to a PC

- Connect your speaker kit's main input (the connector on the back of the right satellite speaker) to the green FRONT SPEAKERS or FRONT OUT connector on your sound card or on the sound card integrated into your computer's motherboard. Use the included male-male mini-jack cable for this connection.

2.2.2. Connection to a television set equipped with a headphone jack

- Connect your speaker kit's main input (the connector on the back of the right satellite speaker) to the headphone jack on your television set.

2.2.3. Connection to a DVD player/television set equipped with Left and Right audio outputs

Requires a female mini-jack/double male RCA cable (not included – please see diagram 12A, below).

 
1. Connect your speaker kit's mini-jack connector to the female mini-jack/double male RCA cable.
2. Connect the white RCA connector on the female mini-jack/double male RCA cable to the corresponding audio output on your DVD player/television set.
3. Connect the red RCA connector on the female mini-jack/double male RCA cable to the corresponding audio output on your DVD player/television set.

2.2.4. Connection to a game console

Requires a female mini-jack/double female RCA cable (not included – please see diagram 12B, below).

1. Connect your speaker kit's mini-jack connector to the female mini-jack/double female RCA cable.
2. Connect the white and red connectors on your console's A/V cable to the female mini-jack/double female RCA cable.

Please refer to your console's user manual for more information on the other connections.

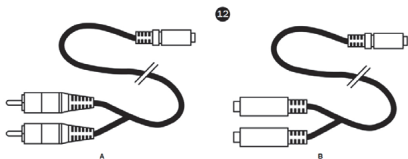

3. USING YOUR XPS 2.030 DJ CLUB SPEAKER KIT

1. Switch on the audio source you wish to use (PC, television set, DVD player or game console).
2. Plug your speaker kit's power cable (4) into an electrical outlet.
3. Set the On/Off switch (3) to **ON**.
4. Adjust the master volume (**Volume**) and the treble control (**Treble**) on the right speaker.



When you connect an audio source to the auxiliary audio input on the front of the right satellite speaker, the main audio source is disabled.



When you connect headphones to the headphone connector on the front of the right satellite speaker, the satellite speakers are automatically cut off and only the headphone output is enabled.

4. TECHNICAL SUPPORT

If you encounter a problem with your product, please go to <http://ts.hercules.com> and select your language. From there you will be able to access various utilities (Frequently Asked Questions (FAQ), the latest versions of drivers and software) that may help to resolve your problem. If the problem persists, you can contact the Hercules products technical support service ("Technical Support"):

By email:

To reach our Technical Support via **email**, you must first register online on the <http://ts.hercules.com/> website. The information that you provide will help our technicians to resolve your problem as quickly as possible.

Click on **Product Registration** and follow the instructions displayed onscreen.

If you have already registered your product, please enter your user info in the **Username** and **Password** fields, then click on **Login**.

By telephone (if you do not have Internet access):

United Kingdom	08450800942 Charged at local rate	Monday to Saturday from 8 a.m. to 7 p.m.
United States	1-866-889-5036 Free	Monday to Friday from 9 a.m. to 8 p.m. Saturday from 8 a.m. to 2 p.m. <i>(Eastern Standard Time)</i> Monday to Friday from 6 a.m. to 5 p.m. Saturday from 5 a.m. to 11 a.m. <i>(Pacific Standard Time)</i>
Canada	1-866-889-2181 Free	Monday to Friday from 9 a.m. to 8 p.m. Saturday from 8 a.m. to 2 p.m. <i>(Eastern Standard Time)</i> Monday to Friday from 6 a.m. to 5 p.m. Saturday from 5 a.m. to 11 a.m. <i>(Pacific Standard Time)</i>
Denmark	80887690 Free	Monday to Saturday from 9 a.m. to 8 p.m. <i>(English)</i>
Sweden	0200884567 Free	Monday to Saturday from 9 a.m. to 8 p.m. <i>(English)</i>
Finland	0800 913060 Free	Monday to Saturday from 10 a.m. to 9 p.m. <i>(English)</i>

Hours of operation and telephone numbers are subject to change. Please visit <http://ts.hercules.com> for the most up-to-date Technical Support contact information.

5. WARRANTY

Worldwide, Guillemot Corporation S.A. ("Guillemot") warrants to the consumer that this Hercules product will be free from material defects and manufacturing flaws for a period of two (2) years from the original date of purchase. Should the product appear to be defective during the warranty period, immediately contact Technical Support, who will indicate the procedure to follow. If the defect is confirmed, the product must be returned to its place of purchase (or any other location indicated by Technical Support).

Within the context of this warranty, the consumer's defective product will, at Technical Support's option, be either repaired or replaced. Where authorized by applicable law, the full liability of Guillemot and its subsidiaries (including for indirect damages) is limited to the repair or replacement of the Hercules product. The consumer's legal rights with respect to legislation applicable to the sale of consumer goods are not affected by this warranty.

This warranty shall not apply: (1) if the product has been modified, opened, altered, or has suffered damage as a result of inappropriate or abusive use, negligence, an accident, normal wear, or any other cause not related to a material defect or manufacturing flaw; (2) in the event of failure to comply with the instructions provided by Technical Support; (3) to software not published by Guillemot, said software being subject to a specific warranty provided by its publisher.

ADDITIONAL WARRANTY PROVISIONS

In the United States of America and in Canada, this warranty is limited to the product's internal mechanism and external housing. Any applicable implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited to two (2) years from the date of purchase and are subject to the conditions set forth in this limited warranty. In no event shall Guillemot Corporation S.A. or its affiliates be liable for consequential or incidental damage resulting from the breach of any express or implied warranties. Some States/Provinces do not allow limitation on how long an implied warranty lasts or exclusion or limitation of incidental/consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other legal rights which vary from State to State or Province to Province.

Copyright

© 2011 Guillemot Corporation S.A. All rights reserved.

Hercules® is a registered trademark of Guillemot Corporation S.A. All other trademarks and brand names are hereby acknowledged and are property of their respective owners. Illustrations not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another.

ENVIRONMENTAL PROTECTION RECOMMENDATION



At the end of its working life, this product should not be disposed of with standard household waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) for recycling.

This is confirmed by the symbol found on the product, user manual or packaging.

Depending on their characteristics, the materials may be recycled. Through recycling and other forms of processing Waste Electrical and Electronic Equipment, you can make a significant contribution towards helping to protect the environment.

Please contact your local authorities for information on the collection point nearest you.