
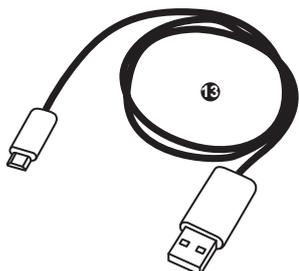
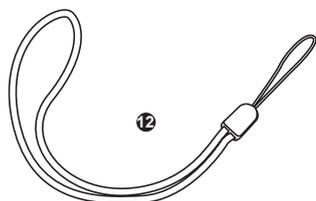
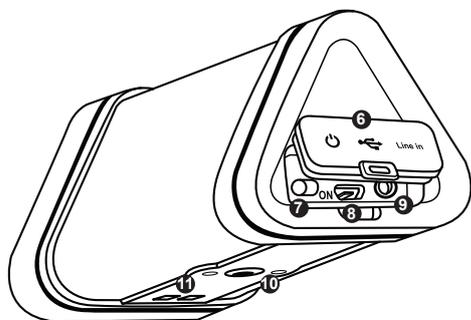


# WAE Outdoor 04Plus

Wireless Audio Experience

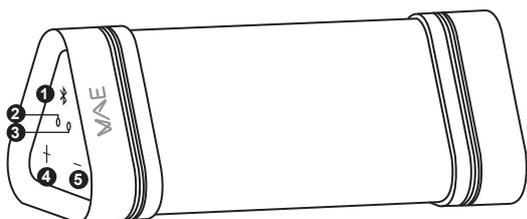

1. **Bluetooth® button (pairing)**
2. **Low battery indicator (red)**
3. **Bluetooth® indicator (blue)**
4. **Volume + / Next track**
5. **Volume - / Previous track**
6. **Protective cover**
7. **On/off switch**
8. **Micro-USB port with charge indicator**
9. **Line input connector**
10. **Screw thread for ¼" mount**
11. **Wrist strap attachment hoop**
12. **Wrist strap**
13. **Micro-USB to USB cable**

## 1. Charge completely before first use

Completely charge your WAE Outdoor 04Plus speaker before using it for the first time. Connect the Micro-USB connector on the cable (13) to the Micro-USB port (8) on the WAE Outdoor 04Plus speaker. Connect the other end of the cable to the USB port on a computer or on a smartphone/tablet USB power adapter (5V/1A)\*.

The standard charging time is 3 hours.

While charging, the charge indicator (8) stays lit up in green. When the battery is fully charged, the charge indicator (8) goes off.

## 2. Getting started with your speaker

To power on your WAE Outdoor 04Plus speaker, set the on/off switch (7) to ON.

When used for the first time, your WAE Outdoor 04Plus speaker is ready for pairing: the *Bluetooth®* indicator (3) flashes blue.

- On your smartphone/tablet, MP3 player or computer, enable the *Bluetooth®* wireless technology function, and search for available *Bluetooth®* devices.

- Select WAE Outdoor in the list of available *Bluetooth®* devices and carry out the pairing (if an access code is required, enter 0000).

Once the devices are paired and connected, the *Bluetooth®* indicator (3) on the WAE Outdoor 04Plus speaker stays lit up in blue. You are now ready to play your music.

## 3. Connecting 2 devices to the WAE Outdoor 04Plus speaker at the same time

Your WAE Outdoor 04Plus speaker features A2DP Multipoint technology, allowing you to connect two smartphones/tablets to it at the same time. While your WAE Outdoor 04Plus speaker is connected to a device (the *Bluetooth®* indicator (3) stays lit up in blue), press the *Bluetooth®* button (1) twice: the *Bluetooth®* indicator (3) flashes blue.

Your WAE Outdoor 04Plus speaker is now ready for pairing and connection with a second device.

Only one smartphone/tablet can play music at a time. To switch between one and the other, pause playback of the track being played on the first device, and start playback on the second device.

Switching between devices can take from 3 to 10 seconds, depending on the smartphone/tablet models.

## 4. Bluetooth® disconnection and new pairing

When the WAE Outdoor 04Plus speaker is connected to a device (smartphone/tablet, MP3 player, computer...), press and hold the *Bluetooth®* button (1) for 3 seconds to disconnect the connected device. The *Bluetooth®* indicator (3) flashes blue to indicate that you can now pair a new *Bluetooth®* device.

## 5. Clearing the saved list of paired devices

Your WAE Outdoor 04Plus speaker can save pairing information for up to 8 devices. A long press (8 seconds) on the *Bluetooth®* button (1) lets you clear the saved list of paired devices.

## 6. Volume and music controls

The + and - buttons (4 and 5) let you control the volume of your WAE Outdoor 04Plus speaker, independently of the controls on your *Bluetooth®* device, by way of short presses on the corresponding button.

For devices supporting Absolute Volume (AVRCP 1.4) mode, their volume level is directly controlled by the WAE Outdoor 04Plus speaker.

The + and - buttons (4 and 5) also let you switch to the next track or the previous track, respectively, by way of a long press on the corresponding button.

Pressing both the + and - buttons (4 and 5) at the same time lets you pause a track, or resume playback of a paused track.

## 7. Line input

You can connect your MP3 player directly to the speaker's line input connector (9).

## 8. Standby mode

When the WAE Outdoor 04Plus speaker is not connected to any *Bluetooth®* device for 10 minutes or more, it switches to standby mode in order to save battery power. You can "wake it up" from standby mode by pressing the *Bluetooth®* button (1).

## 9. IP66 protection

Make sure that the protective cover (6) is properly closed, in order to ensure that the product is water- and dust-tight.

\* *Not included.*