

How do I delete pictures from the DUALPIX memory?

To delete photos and video sequences from the DUALPIX memory, ensure that your camera is not connected to your PC and press the Shutter and MODE button simultaneously for 3 seconds until "--" is displayed.