The picture is fuzzy and/or pixelized when I record videos but the sound is OK.

If the picture is not sharp when recording videos, update the graphics board drivers. The software uses the graphics board's overlay mode for displaying videos. In general this mode has been optimised in the latest updated versions of graphics board drivers, available from your manufacturers.

If the problem persists, install the latest version of DirectX, available on http://www.microsoft.com as this will correct any problems related to Microsoft IEEE 1394 drivers.