

 
## How can I configure the microphone of my webcam Deluxe to work with chat softwares ?

Once your webcam is correctly installed, first make sure its microphone is used by Windows as default recording source

Windows Control Panel > Sound and Audio Devices properties > AUDIO tab



USB CAMERA should appear under "Sound Recording". If this is not the case, simply select it from the scroll down menu, then click APPLY.

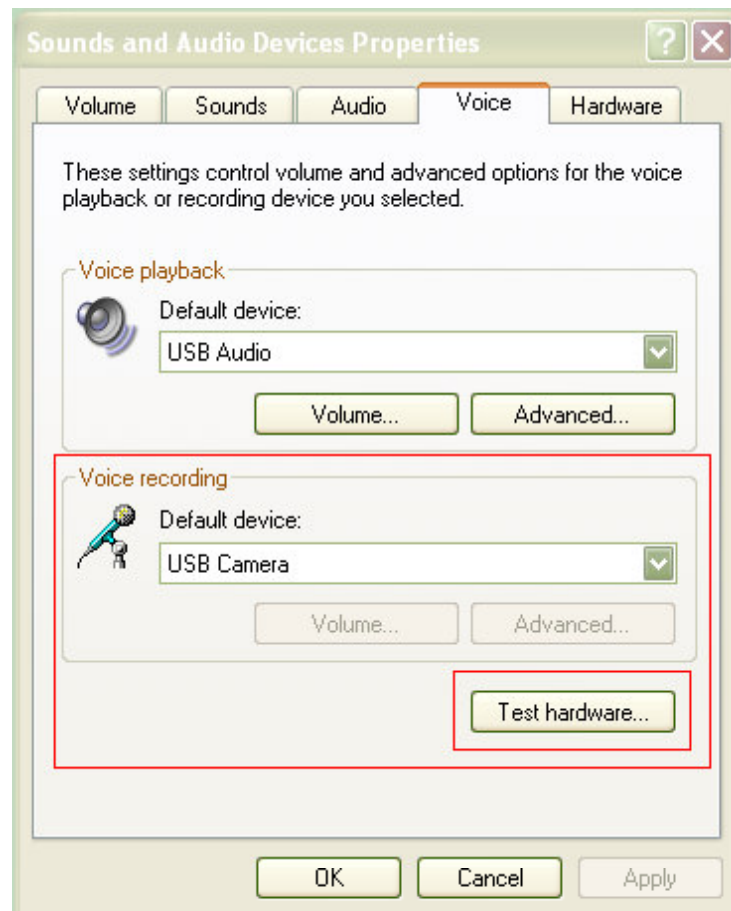

The configuration should normally be the same under the VOICE tab. The TEST HARDWARE button will allow you to verify the sound configuration of Windows as well as the microphone.

## SOFTWARE CONFIGURATION


The following are given as examples. Please consult your software documentation for more details

### [MSN Messenger \( configuration relative to version 7.5\)](#)



Before starting a conversation, first launch "Audio and Video Setup from the TOOLS menu.

The first step will allow you to test that your speakers are working correctly

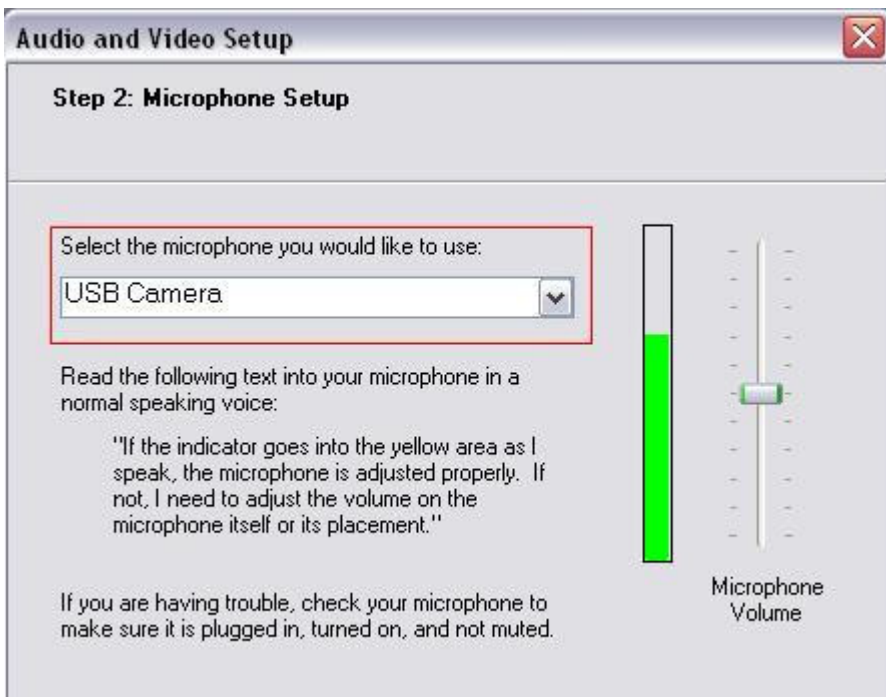

Next, you will get asked to test your microphone. If the configuration was previously done to Windows Audio properties, USB CAMERA should normally be automatically set as preferred microphone to be used. If not, select it from the scroll down menu


The last step will provide testing and configuration for your webcam

## [Yahoo Messenger \( configuration relative to version 7\)](#)



 Before launching any conversation, first proceed to the configuration from the MESSENGER> PREFERENCES menu.

From the next window, select « Calling and Audio »

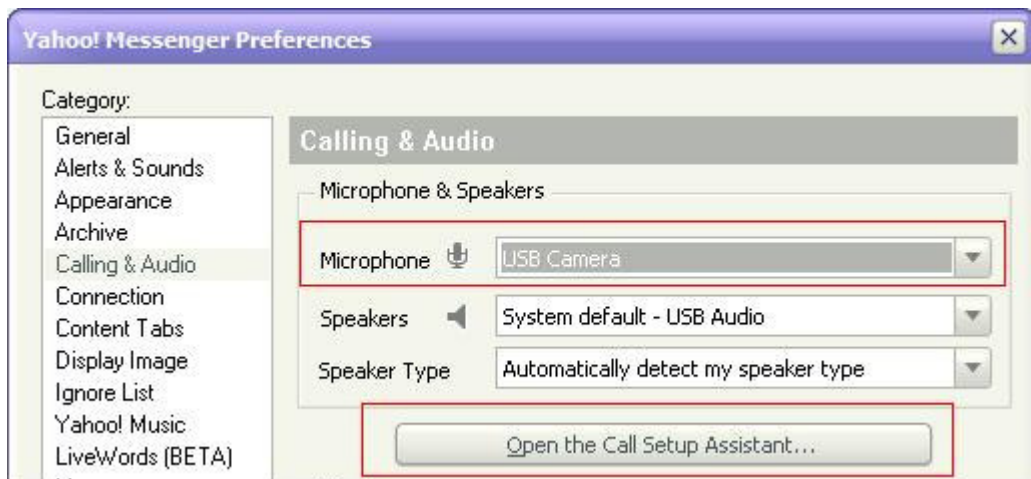

If the configuration was previously done to Windows Audio properties, USB CAMERA should normally be automatically set as preferred microphone to be used. If not, select it from the scroll down menu. Then click on " Open the call setup assistant" to launch the configuration utility



The first step will allow you to test the microphone. If successful, proceed to configure your speakers and audio system.