## How should I configure my Smart TV card for TV reception and video input?

Once you are certain you card is installed correctly, Power VCR (or any other software you may wish to use) needs to be configured according to the usage you want to make.

Video Capture Device		
Conexant Capture	~	
Video Option		
		~
Video Source		
Video Tuner 🛛 🖌 🖉	le TV Advanc	ed
Audio Capture Device		
		~
	-Non-Tuner Audio Sourc	es
Tuner Audio Source	-Non-Tuner Audio Sourc	
Tuner Audio Source Tuner Playback Source	Non-Tuner Playback So	ource

This configuration is the default for TV reception. If you want to use the Smart TV to recording an external video source (VCR, camera), you would need to select the connector use for capture (Composite or S-Video) under **Video Source.** 

Click on the **Advanced** button to select the format for all inputs, according to your location AND the format supported by your card (this information should be indicated on the card itself and near the bar code on the box)

For the **Audio Source**, it should reflect the settings of your soundcard (LINE IN is selected as Recording source, and that it is not muted on playback). Also be sure you have linked the AUDIO OUT of your Smart TV card to the LINE IN of your soundcard

/A Devices	Video	Profiles	Recording	/Advanced	Channels	Snapshot	TV Replay
-Channels I O Cable	10 10 T			Anten	na		
Signal	Channel		Channel Station		Pre	set [	~
	2		CH 2			C	
	3		CH 3				
	4		CH 4				
	5		CH 5				
	6		CH 6				
Image: A start of the start	7		CH 7			1	~
-Channels I Channel	Editor	Preset		- Video Sigr	Auto nal Format S	) Scan Setting	
4			~	United St	ates of Ame	erica	~
Channel Station			Video Signal Format				
CH 4			NTSC M			V	
-							

When using the card as a TV Tuner, you will also need to select your type of input (Antenna or cable), as well as you location. You will then be able to launch the **Auto Scan** in order for the software to find the channels.