

I get no sound from the microphone connected to the Karaoke Console.

As indicated in the user manual, your speakers must be connected to the back of the Karaoke Console, as it becomes your computer's default soundcard once connected. This is also necessary in order to use the microphones effects, which are provided by the Console.