

## **I can't access the Muse control panel as presented in the user manual.**

Be sure to install your card using the most recent drivers available from our support site.

1- From **Windows Control Panel**, open:

**Sound and Audio Devices** (Windows XP)

**Sounds and Multimedia** – (Windows ME / 2000)

**Multimedia** – (Windows 98SE)

Make sure the box for **Show Volume Control on the Taskbar** is checked

2- Press the **Apply**. At this point, you should see a new volume icon appear on the system tray by your clock.

3- Go to your **Start** menu, and select **Run**, then type:

**MIXER.EXE /STARTUP**

4- Repeat Step 1, but this time, uncheck the box. Press **APPLY** and close the window.

5- Close all open windows, and reboot your PC.

The **C-Media mixer** icon should now appear by your clock.