

**I hear distortion when connecting devices to the Line input of the console.**

- Make sure the level switch selector (**LINE IN / Phono**) is set to the appropriate position for your source.
- The inputs of the console are made for consumer grade devices with a Line level output (-10dBu), such as MP3 player, portable CD player, etc.
- Some DJ peripherals (using 2V Line level) or professional grade devices (using +4dBV level) will overload the inputs signal and consequently create distortion if connected to the DJ Console Rmx inputs.