Hercules Muse Pocket configuration for VIRTUAL DJ (OS X).

This document will explain how to configure your Hercules Muse Pocket USB soundcard so that it can perform properly with VIRTUAL DJ 7 et 8.

*Note that the following procedure can also be applied to similar multichannel USB audio devices.

The following subjects will be covered:

- Installation
- OS X configuration
- Speakers and headphone connections
- VIRTUAL DJ audio configuration

Before we start, we need to identify your model:



Muse Pocket LT

Muse XL Pocket LT3

INSTALLATION

The **Hercules Muse Pocket LT** and **Hercules Muse XL Pocket LT3** do not require the installation of any specific drivers. Simply connect it to a USB port of your computer, and OS X will automatically recognize and install standard USB Audio drivers that will allow you to use the Muse Pocket with any multimedia applications.

Once your soundcard is correctly installed, it needs to be configured so that all outputs will be accessible in VIRTUAL DJ. You can do this from **Audio/MIDI Setup**, which can be found in **Applications > Utilities**



OS X configuration

The **Muse Pocket LT** will appear as **USB Audio**, while the **Muse Pocket LT3** will appear by name. Note that many devices may be available.

000	Audio Devices
Built-in Input 2 in/ 0 out Built-in Output 0 in/ 2 out Muse Pocket LT3 2 in/ 6 out	Muse Pocket LT3 Clock source: Default ? Input Output Source: Default ? Format: 44100.0 Hz 6ch-16bit ?
	Ch Volume Value dB Mute M 0.99 0.19 0.22 2: 0.99 -0.19 0.39 3: 0.399 -0.19 0.39 4: 0.399 -0.19 0.39 5: 0.99 -0.19 0.39 6: 0.999 -0.19 0.39
+ - & -	3 Configure Speakers

<u>OS X 10.10 / 10.9 / 10.8 / 10.7 / 10.6</u>

- 1) First, select the souncard you want to configure.
- 2) Next, under Audio Output, insure that 6ch is selected.
- 3) Then, click Configure Speakers to launch the Speaker Setup wizard.

<u>OS X 10.5.8</u>

\varTheta 🔿 🔿 Audio MIDI Setup									
		Audio	Devices	MIDI Devi	ces				-
System Setting	js —								_
Default Input:	🗯 Built-in	Default Ou	tput: 🚺 🗳 Built	-in Outp	ut		•		
1 Properties For	 É Built-in É Built-in ✓	Output ocket LT3		System Out	tput: 🗳 Built	-in Outp	ut		?
	Denum					Ŭ			
Audio Input				Audio Out	put				
Master Strea	m	\$		Master	Stream	\$			-
Source: Microphone				Source:	Default			•	
Format: 44100.0 Hz 💌 2ch-16bit 🛟				Format:	44100.0 Hz	6ch-	16bit	\$	
Ch Volume	Value	dB Mute	Thru	Ch Volume		Value	dB	Mute	
0 N	-	- 8		м 😔					
1	0.59	0.00		1		0.99	-0.19		
2	0.59	0.00		2		0.99	-0.19		
				3	(0.99	-0.19		
				4		0.99	-0.19		
				5		0.99	-0.19		
				6		0.99	-0.19		



Select Multichannel, then 5.1 Surround.

Stereo	Multichannel	5.1 Surround	÷
For each speaker, c connection, click a sub- woofer 4	speaker to play a sour	tenter renter right front 2	ker. To test the
		e	5 ·
left surround 5			right surround 6
?		Done	Apply

Finally, click **Apply**.

You can also use this interface to test your speakers by clicking on any of the boxes representing the speakers,



Speakers and headphone connections

Next, proceed to connecting your speakers and headphone to the Muse Pocket.



Muse Pocket LT:

- Connect your speakers to the **Center/Sub** audio output.

- Connect your headphone to the **FRONT** audio Output.

Muse XL Pocket LT3:

- Connect your speakers to the **Center/Sub** audio output.
- Connect your headphone to the **FRONT** audio Output.



Important: <u>DO NOT</u> connect your headphone to the dedicated headphone output, as this will prevent all other outputs from working.

A note regarding 5.1 speakers systems:

- Only connect the FRONT (often coloured green) connector to the soundcard.


- Your system will probably need to be configured in **SURROUND** mode so that the sound can be heard on all speakers (Consult the speaker's user manual for more details).



VIRTUAL DJ audio configuration

The last remaining step is to configure VIRTUAL DJ to use your soundcard.

For **VIRTUAL DJ 7**, in the **Config > Sound Setup** menu, the configuration should look like this:

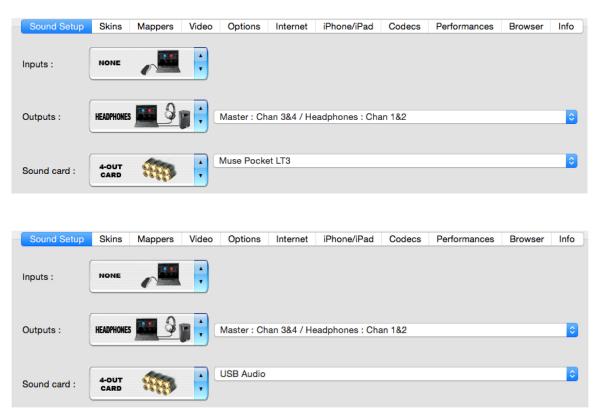

Inputs : NONE

Outputs: Heaphones > Master Chan 3&4 / Headphone: Chan 1&2

Sound card: 4-out card > USB audio or Muse Pocket LT3



For VIRTUAL DJ 8, go to Settings > Audio. The configuration remains similar:

First select:

Outputs: Speakers + Heaphones

Card: Internal Soundard

õ	AUDIO SETTINGS										
AUDIO	OUTP	υτ		CAR	D						INPUT
INTERFACE	Ô	SPEAKER ONL	Y		INTERNAL SOUNDCARD	Ι		TWO SOUNDCARDS		Ā	MICROPHONE
†‡†	ត	SPEAKER + HEADPHONE		A	STEREO TO MONO SPLITTER					0	TIMECODE SIGNAL
OPTIONS	ŧŧŧ	EXTERNAL MIX	ER							~	LINE INPUT
	Source master headphones new		oundCard B Audio B Audio				Chanr Chan 3 Chan 1	8&4	* X		8000 Hz, 512 samples 8000 Hz, 512 samples
AUDIO	OUTPL	л	_	CARD	AUDIO	SETT	FINGS	_			INPUT
INTERFACE	Ö	SPEAKER ONLY		<u>A</u>	INTERNAL SOUNDCARD			TWO SOUNDCARDS		Ā	MICROPHONE
†‡†	ດ	SPEAKER + HEADPHONE		7	STEREO TO MONO SPLITTER					0	TIMECODE SIGNAL
CONTROLLERS	ŧŧt	EXTERNAL MIXE	R							~	LINE INPUT
OPTIONS											
Δ	Source		undCard se Pocket LT	2			Channe Chan 3&			- 400	
	master headphones		se Pocket LT se Pocket LT				Chan 38 Chan 18		▼ X ▼ X		00 Hz, 512 samples
LICENSES	new	* Mu	SC I OCKEL LI			•	Chall 10	<i>د</i>	• •	- 4600	JO HZ, JIZ SAMPles

Then assign as follow:

Master > USB audio or Muse Pocket LT3 > Chan 3&4

Headphone > USB audio or Muse Pocket LT3 > Chan 1&2

The configuration is now complete. The Hercules Muse Pocket USB soundcard is now ready to be used with VIRTUAL DJ.

