

DJ Console 4-Mx does not control VirtualDJ 7 LE 4-Mx, except for a few controls such as the crossfader and master volume.

Your DJ Console 4-Mx is probably set to a MIDI channel other than **Channel 1-2**.

Open the DJ Console control panel, click on the **ADVANCED** tab, and set the MIDI channel to 1-2.

