

Image loss after eCAFÉ exits standby mode

The display remains dark after my eCAFÉ exits standby mode.
Video file playback is frozen after my eCAFÉ exits standby mode.

Solution

When your eCAFÉ™ switches to standby mode during video playback, exiting standby mode may cause an incomplete video display (or even no display at all).

To restore a functional environment, you need to exit the video player (you may need to press the “ESC” key first if you were playing the video in full screen mode).