


Incorrect keyboard language layout

My eCAFÉ's keyboard features an incorrect language layout (certain keys do not produce the appropriate characters).

I want to change my eCAFÉ's keyboard language layout.

Solution

1. After starting your eCAFÉ, on the Login screen (i.e. where your eCAFÉ asks you to enter your password), click your session name.
2. Select the required keyboard language layout in the drop-down list located in the menu bar at the bottom of the screen (select "Other..." to display languages that do not appear by default).

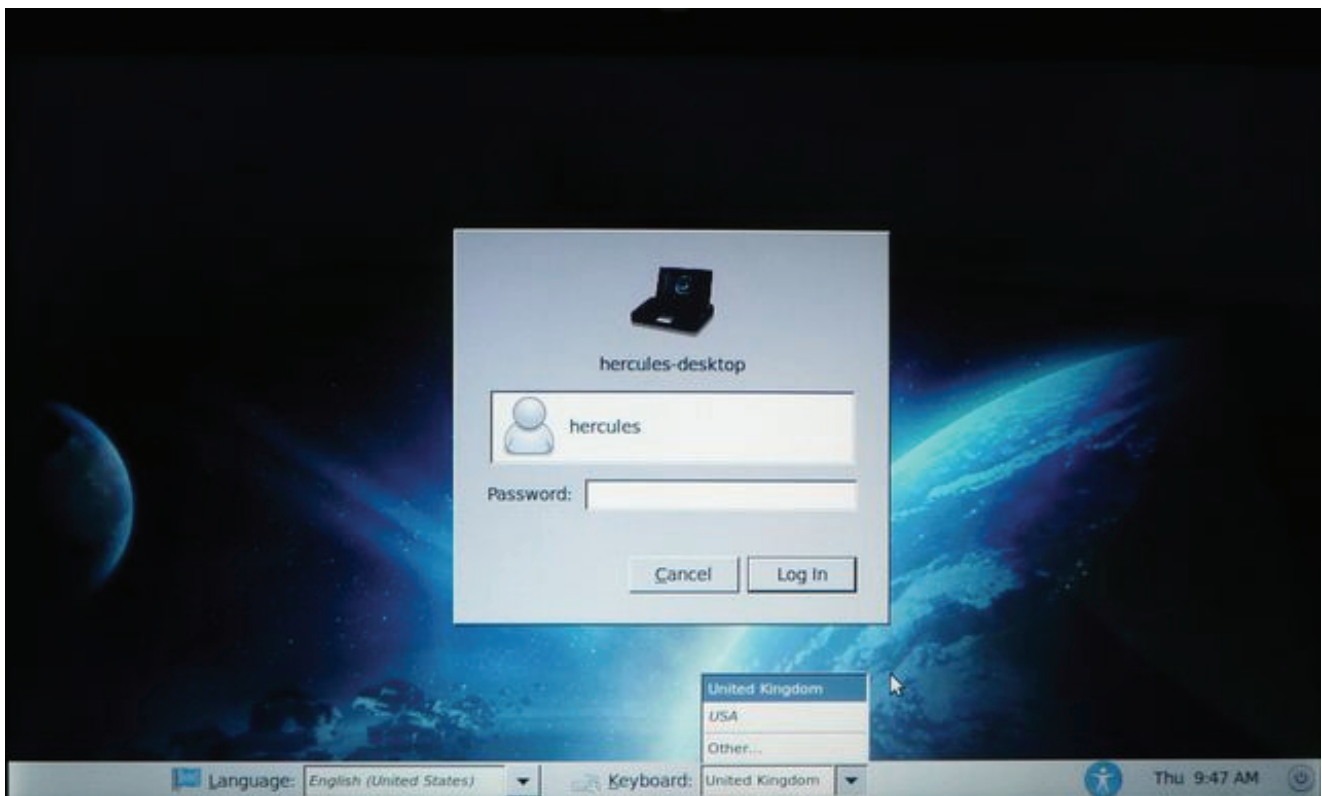

3. Enter your password, then click "Log in": your keyboard now uses the language layout that you selected in the previous step (the selected language will now be the default keyboard language).