

CONTENTS

1.	YOUR HERCULES MODEM ROUTER	4
1.1.	Recommendations	4
1.2.	Specifications	5
1.3.	System requirements	5
1.4.	Box contents	5
1.5.	Front face overview	6
1.6.	Connectivity overview	6
2.	INSTALLING YOUR HERCULES MODEM ROUTER	7
2.1.	Launching the Hercules Modem Router Installation Assistant	7
2.2.	Step 1: How to position your modem router	7
2.3.	Step 2: How to connect your modem router	9
2.3.1.	<i>Uninstalling your old modem or disabling the automatic connection to your old modem</i>	<i>9</i>
2.3.2.	<i>Getting past the Content Advisor (parental control)</i>	<i>10</i>
2.3.3.	<i>Installing a filter (recommended)</i>	<i>11</i>
2.3.4.	<i>Connecting the modem router</i>	<i>11</i>
3.	WiFi MANAGER, THE VERSATILE UTILITY	12
3.1.	Opening the door to WiFi Manager	12
3.2.	Changing the WiFi Manager password	13
3.3.	Navigating within the WiFi Manager interface	15
3.4.	Connecting the modem router to your Internet account	15
3.4.1.	<i>Configuring your ADSL connection</i>	<i>16</i>
3.4.2.	<i>Testing your ADSL connection</i>	<i>17</i>
3.4.3.	<i>Resolving any difficulties in accessing WiFi Manager or the Internet</i>	<i>18</i>
3.5.	Mastering your WiFi network at your fingertips	21
3.5.1.	<i>Personalizing your WiFi network</i>	<i>21</i>
3.5.2.	<i>Securing your WiFi network using the Assistant</i>	<i>22</i>
3.5.3.	<i>Limiting access to your WiFi network to certain WiFi computers and devices</i>	<i>25</i>
3.5.4.	<i>Disabling your WiFi network</i>	<i>27</i>
3.6.	The firewall: your ultimate protection against Internet attacks	27
4.	WELCOME TO THE WIRELESS ATTITUDE™!	28
4.1.	A few important points to bear in mind before getting started	28
4.2.	Computers running Windows XP: Sharing folders, a printer or an ADSL connection	28
4.2.1.	<i>Windows XP: Using the Network Setup Wizard in an <u>Infrastructure</u> network</i>	<i>28</i>
4.2.2.	<i>Windows XP: Sharing folders</i>	<i>33</i>
4.2.3.	<i>Windows XP: Accessing shared folders</i>	<i>34</i>
4.2.4.	<i>Windows XP: Sharing a printer</i>	<i>34</i>
4.2.5.	<i>Windows XP: Modifying a workgroup name</i>	<i>36</i>

4.2.6.	<i>Windows XP: Manually enabling or disabling your adapter's WiFi connection (advanced users).....</i>	<i>36</i>
4.3.	Computers running Windows 2000: Sharing folders, a printer or an ADSL connection.....	37
4.3.1.	<i>Creating a workgroup in Windows 2000</i>	<i>37</i>
4.3.2.	<i>Windows 2000: Sharing folders</i>	<i>38</i>
4.3.3.	<i>Windows 2000: Accessing shared folders.....</i>	<i>38</i>
4.3.4.	<i>Windows 2000: Sharing a printer.....</i>	<i>38</i>
4.3.5.	<i>Windows 2000: Modifying a workgroup name.....</i>	<i>40</i>
4.3.6.	<i>Windows 2000: Sharing an ADSL connection in an <u>Infrastructure</u> network.....</i>	<i>41</i>
4.3.7.	<i>Windows 2000: Manually enabling or disabling your adapter's WiFi connection (advanced users).....</i>	<i>42</i>
4.4.	Computers running Windows Me: Sharing folders, a printer or an ADSL connection.....	43
4.4.1.	<i>Windows Me: Using the Home Networking Wizard in an <u>Infrastructure</u> network.....</i>	<i>43</i>
4.4.2.	<i>Windows Me: Sharing folders</i>	<i>45</i>
4.4.3.	<i>Windows Me: Accessing shared folders.....</i>	<i>46</i>
4.4.4.	<i>Windows Me: Sharing a printer.....</i>	<i>46</i>
4.4.5.	<i>Windows Me: Modifying a workgroup name</i>	<i>48</i>
4.4.6.	<i>Windows Me: Manually enabling or disabling your adapter's WiFi connection (advanced users).....</i>	<i>48</i>
4.5.	Computers running Windows 98 SE: Sharing folders, a printer or an ADSL connection.....	49
4.5.1.	<i>Windows 98 SE: Creating a workgroup.....</i>	<i>49</i>
4.5.2.	<i>Windows 98 SE: Sharing folders.....</i>	<i>49</i>
4.5.3.	<i>Windows 98 SE: Accessing shared folders.....</i>	<i>50</i>
4.5.4.	<i>Windows 98 SE: Sharing a printer.....</i>	<i>50</i>
4.5.5.	<i>Windows 98 SE: Sharing an ADSL connection in an <u>Infrastructure</u> network.....</i>	<i>52</i>
4.5.6.	<i>Windows 98 SE: Manually enabling or disabling your adapter's WiFi connection (advanced users).....</i>	<i>53</i>
5.	MANUALLY CONFIGURING YOUR ADSL CONNECTION.....	54
5.1.	Gathering your ADSL connection settings.....	54
5.2.	Entering your ADSL connection settings.....	56
5.2.1.	<i>Testing your ADSL connection.....</i>	<i>59</i>
5.2.2.	<i>Reconnecting or clearing fields.....</i>	<i>60</i>
6.	WIFI MANAGER FOR ADVANCED USERS	61
6.1.	Configuring your WiFi network's advanced options.....	61
6.2.	Configuring your Internet firewall.....	63
6.2.1.	<i>Opening doors in your firewall for certain Internet services.....</i>	<i>63</i>
6.2.2.	<i>Limiting access of one of your network computers to Internet services.....</i>	<i>66</i>
6.3.	A toolbox with multiple facets.....	69
6.3.1.	<i>Restarting the Hercules Modem Router.....</i>	<i>69</i>
6.3.2.	<i>Restarting the WiFi function.....</i>	<i>69</i>
6.3.3.	<i>Loading/Saving your settings.....</i>	<i>70</i>
6.3.4.	<i>Restoring your original settings.....</i>	<i>71</i>
6.3.5.	<i>Updating the modem router's firmware.....</i>	<i>71</i>
6.4.	Other advanced options.....	72
6.4.1.	<i>Configuring the DHCP server.....</i>	<i>72</i>

- 6.4.2. *Managing the IP addresses of local network computers* 73
- 6.4.3. *Enabling/Disabling UPnP* 74
- 6.4.4. *Controlling your Hercules Modem Router from a remote location via the Internet*..... 74
- 6.4.5. *Changing the Hercules Modem Router's password*..... 74
- 6.5. Product information 75
- 7. **GLOSSARY** 76
- 8. **TECHNICAL SUPPORT**..... 79
- 9. **WARRANTY** 79
- 10. **ENVIRONMENTAL PROTECTION RECOMMENDATION** 79

ENGLISH

FRANÇAIS

DEUTSCH

NEDERLANDS

ITALIANO

ESPAÑOL

1. YOUR HERCULES MODEM ROUTER

Your **Hercules Modem Router**, or Hercules Wireless G ADSL Modem Router, is a clever combination of two products in one: it is a **WiFi router** and an **ADSL modem** in one convenient package.

Your Hercules Modem Router opens up the doors of **WiFi** for you, allowing you to discover a new way of communicating between several computers, sharing Internet access, peripheral devices, data and more... all without the constraints of cables.

Great care has been taken in designing your product. Both simple to operate and user-friendly, it is well suited to beginners and advanced users alike.

And now, it's time to learn about your new product and join in the Wireless Attitude™!

1.1. Recommendations

- Never open up your Hercules Modem Router, as you risk damaging its internal components.
- In order to avoid the risk of fire or electrical discharge, keep your router away from:
 - rain or humidity, as well as all fluids (water, chemical products and any other liquids),
 - sources of heat such as radiators, stoves and any other heat-producing devices (including amplifiers),
 - direct sunlight.
- Do not cover your modem router.
- Unplug the router's power cable if you do not plan on using it again for an extended period of time. To unplug the power cable, take hold of and pull on the plug. Never pull on the cable itself.
- Disconnect the router before cleaning. Use a soft cloth for cleaning and avoid using aerosol cleaners.

1.2. Specifications

Your Hercules Wireless G ADSL Modem Router, referred to hereafter in the manual as the **Hercules Modem Router**, is equipped with 4 functionalities: (1) ADSL modem, (2) WiFi **802.11g** wireless **router**, (3) 10/100 LAN switch, and (4) Internet firewall.

- ADSL standards: DMT modulation and demodulation, tone detection for low power mode, ITU 992.1 (G.dmt) Annex A, ITU 992.2 (G.lite), ITU 992.3 ADSL2 (G.dmt.bis), ITU 992.4 ADSL2 (G.lite.bis), ITU 992.5 ADSL2+ (may require an update, depending on the country)
- Full-rate adaptive modem: max. Downstream rate = 24Mbps (ADSL2+)
- WAN mode support
- LAN mode support
- Router mode support
- **802.11g** wireless **access point**
- RF specification: frequency band = 2400-24835MHz
- Max. transmission power: 100mW
- One internal antenna, one slewable and detachable external antenna
- 4 RJ-45 connectors for 10/100Mbps LAN Ethernet connection
- Auto MDIX support (automatic detection of crossed cabling)
- Complies with the IEEE 802.3u standard
- Supports IEEE 802.3x flow control in Full Duplex mode
- Security functions: **WEP/WPA**/filtering by **MAC address**
- **SPI firewall**
- External CC power, input: 200~240V, 50/60Hz, output: 7.5 V CC/1 A
- Blue LEDs on front face
- Software (firmware) update via Ethernet port

1.3. System requirements

To access configuration settings:

- Intel Pentium III, AMD Athlon/AMD-K6
- 64MB RAM
- 10/100 RJ45 Ethernet network adapter
- CD-ROM drive
- Operating system: Microsoft Windows 98 SE, Me, 2000, XP

To access the Internet:


- Active Internet line
- Internet Explorer 6.0, Netscape Navigator 4.7 or Mozilla Firefox 1.0 or higher






1.4. Box contents

Please verify that all of the following elements are present in your Hercules Modem Router box:

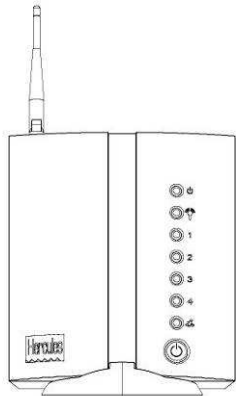
- Hercules Wireless G ADSL Modem Router
- Detachable antenna
- Vertical base
- CD-ROM containing Installation Assistant and user manual in pdf format
- Ethernet cable (gray)
- Telephone cable (black)
- Power adapter
- Paper user manual in English

1.5. Front face overview



-  : Power LED
-  : WiFi LED: lights up when WiFi connection is active, flashes during data transfer
-  1 : 4 LEDs corresponding to the 4 Ethernet ports: each LED lights up when a peripheral is connected to the corresponding port, and flashes during data transfer
-  : Internet LED: lights up when ADSL line is active, flashes during data transfer
-  : On/Off button

1.6. Connectivity overview

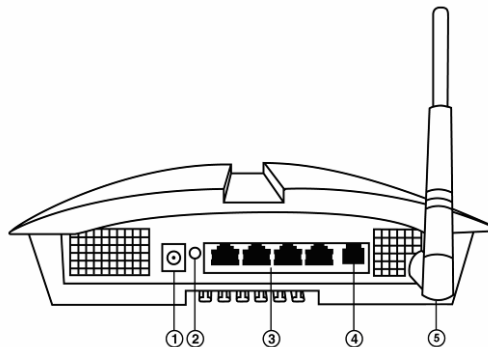

- ① Power plug to connect power adapter
- ② Restore factory default settings button
- ③ Four **Ethernet ports** allowing the Hercules Modem Router to be connected to 4 desktop computers and/or laptop computers and/or game consoles equipped with Ethernet (RJ-45) ports, in order to create a network
- ④ ADSL plug to connect the Hercules Modem Router to a telephone jack
- ⑤ Gold antenna connector (SMA)

2. INSTALLING YOUR HERCULES MODEM ROUTER

To simplify this task, Hercules proposes launching an Assistant which will verify with you, step by step, that the installation of your modem router is carried out correctly.

2.1. Launching the Hercules Modem Router Installation Assistant

The Assistant, available on the CD-ROM included with the modem router, will guide you through the different steps of the installation procedure. To help you with the installation, each of the steps is described below.

- Insert the included CD-ROM into your CD-ROM drive.

The Installation Assistant appears automatically.


If the installation menu does not launch automatically:


- Double-click **My Computer**.

- Double-click .

- Double-click **Setup.exe**, if necessary.

2.2. Step 1: How to position your modem router

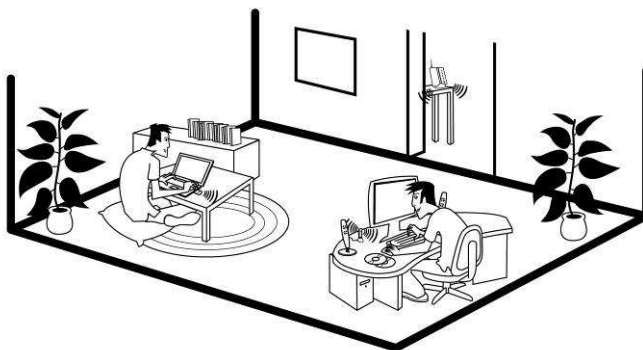

Remove the modem router from its box, along with the detachable antenna. Screw the antenna into the gold connector  located at the back of the modem router, until it is fixed in place.

To help you select the best spot to position your Hercules Modem Router, we are pleased to offer you the following tips, which you may adapt according to your environment (the number of rooms, computers, floors in your home, the presence of any obstacles, the locations of power and telephone plugs...).


- Position the modem router near a wall telephone jack and a power outlet. Avoid using any telephone cable extensions, which may affect the quality and speed of your ADSL connection.
- Try to place your modem router in a room centrally located in relation to your other computers and WiFi devices.

- Keep a minimum distance of 2m between the modem router and any computers and WiFi devices.
- If you have several computers or WiFi devices on different floors in your home (on the ground floor and the second floor, for example), you should ideally try to place your Hercules Modem Router on the ground floor.




Your modem router's WiFi performance may be greatly affected by certain obstacles, such as the presence of paper (a bookcase), metal, water (an aquarium) or a wall made of reinforced concrete between the Hercules Modem Router and any WiFi adapters.

- Position the Hercules Modem Router for the best possible fit with your surroundings:

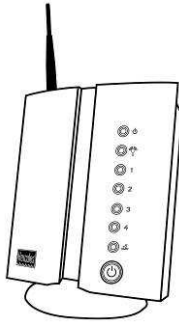


- Vertical: using the included base,

- Horizontal: flat on a desk, for example,

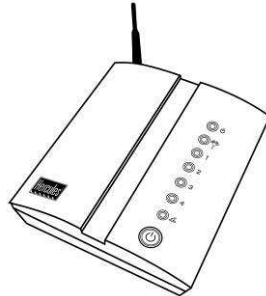

- Wall-mounted: in this case, simply fix the Hercules Modem Router to a wall using 4 screws (not included).

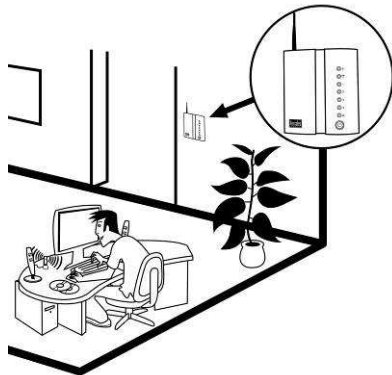

In all cases, the antenna must be positioned vertically.

2.3. Step 2: How to connect your modem router

2.3.1. Uninstalling your old modem or disabling the automatic connection to your old modem



If you have already installed a USB or Ethernet ADSL modem on your computer and you no longer wish to use your old modem, we recommend that you **uninstall** it, as explained below. If you do not wish to uninstall it, you will have to **disable the automatic connection** to that modem. The objective of this procedure is to establish the Internet connection via the local area TCP/IP network created by the Hercules Modem Router, and no longer directly via your old ADSL modem.

If you have never installed a modem before, however, you can skip ahead directly to chapter 2.3.3. **Installing a filter (recommended).**

If you do not intend to use the modem furnished by your service provider anymore:

- Switch off your old modem and then disconnect it.
- Uninstall the software furnished by your service provider, as well as the modem's drivers. For more information, please refer to your modem's user manual.

If you do not wish to uninstall the modem furnished by your service provider:

In order to avoid software conflicts, please follow the procedure outlined below:


- Launch your Internet Explorer browser.
- Click **Tools/Internet Options..**
- Select the **Connections** tab.

The Internet Options window appears.



Scenario 1: your ISP appears in the Internet Options window.

- Disable the automatic connection to your old modem by selecting the **Never dial a connection** option.
- Click **OK**.

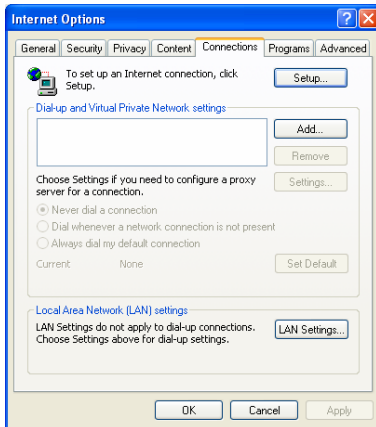

Scenario 2: your ISP does not appear in the Internet Options window.

The automatic connection is managed directly by the software furnished by your ISP.

- Refer to the user manual for your old ADSL modem or for the software furnished by your ISP for details on how to disable the automatic connection and/or for the Internet connection to be established via a **local area network (TCP/IP)**.

Reminder: it is the Hercules Modem Router that will create a local area network through which the computers will access the Internet.



You can also find information on our website (FAQs etc.): www.hercules.com.

2.3.2. Getting past the Content Advisor (parental control)

If you have enabled the **Content Advisor** in your Internet browser in order to control access to certain sites which may include contents of a violent or otherwise undesirable nature, you will not be able to immediately connect to WiFi Manager.


After launching QuickAccess, the Content Advisor will ask you for authorization to view the site <http://192.168.1.1>. This site corresponds to the WiFi Manager interface on your modem router. To access the site, simply give your authorization to **Always allow this Web site to be viewed**. Once you have done so, the modem's address will be stored in your Internet browser and you will then be able to access WiFi Manager directly.

2.3.3. Installing a filter (recommended)


First off, we recommend that you install a **filter** (generally furnished by your ISP (Internet Service Provider) or available for purchase, if you don't already have one) on every telephone jack connected to a piece of telephone equipment (a piece of telephone equipment can be a telephone, a fax machine, an answering machine or your modem router). Installing a filter is not mandatory; however, without a filter, the quality of your telephone communications may be degraded.



If you don't have a filter, get in touch with your ADSL service provider to find out which model you will need (filters may be purchased at do-it-yourself shops or shops specializing in telephone equipment).

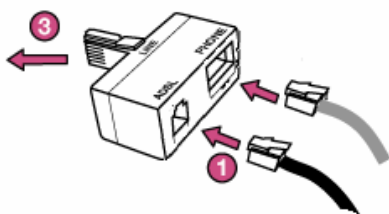


The modem may vary from one country to another.

1. Connect one end of the telephone cable (black) to the **ADSL** (RJ11) connector on the filter.
2. Connect the other end of the cable to the **ADSL** plug  on your Hercules Modem Router.
3. Connect the filter to a wall telephone jack.


*The **PHONE** connector allows you to connect your telephone equipment's standard plug. If need be, verify that your telephone is emitting a tone signal.*


2.3.4. Connecting the modem router

1. Connect the Hercules Modem Router's power cable to the power plug  and plug the power adapter into an electrical outlet.

2. Switch on the Hercules Modem Router by pressing the On/Off button .

*The power LED lights up and the initialization sequence begins. Initialization may take up to **5 minutes**, during which time the **WiFi**, **Internet** and **1-2-3-4** LEDs will light up or flash in succession.*

*Initialization is complete once the **Internet**  (if your ADSL line is active) and **WiFi**  LEDs stay lit.*

3. You may now connect the included Ethernet cable (gray cable ) to one of your Hercules Modem Router's 4 **Ethernet ports** and the Ethernet (RJ-45) port on your computer's network adapter.

The LED corresponding to the number of the Ethernet port you have selected lights up.

4. The Assistant prompts you to install "**Hercules QuickAccess**", a utility for quick connection to the **WiFi Manager** application.



If you do not wish to install this utility, you will only be able to access your modem router by manually entering its address (please see chapter 3.1. **Opening the door to WiFi Manager**).


3. WIFI MANAGER, THE VERSATILE UTILITY

With WiFi Manager, nothing could be easier than replacing your old ADSL modem with the Hercules Modem Router and thereby sharing your Internet access with all of the computers in your home or small business, or simply creating a wireless network.

WiFi Manager is the interface which allows you to communicate with your Hercules Modem Router, configure an ADSL connection, manually or automatically, and configure your wireless network or Internet firewall.

3.1. Opening the door to WiFi Manager

The Installation Assistant you have launched from the CD-ROM has installed a connection utility on your Desktop, called "**Hercules QuickAccess**". This utility will bring you straight to the door (locked with a key, for the moment) to WiFi Manager.

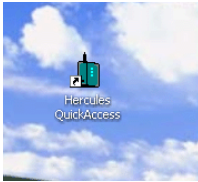

- To access the door to enter WiFi Manager, simply click the **Hercules QuickAccess** icon on your Desktop.

The connection window to the modem router appears.



Or, if you have chosen not to install the QuickAccess icon:

- Open up the browser of your choice (Internet Explorer or Netscape Navigator) and enter the address **192.168.1.1**.

You are now at the door to enter WiFi Manager, which you must open using a password.

- To open the door, enter the default password or enter your own password if you have already defined one (for information on how to define your own password, please refer to chapter 3.2. **Changing the WiFi Manager password**).

- Click **Connection**.



The password ensures that you are the only one who can access your WiFi Manager, and therefore your Hercules Modem Router's settings. For this reason, it is important that you change the password when using WiFi Manager for the first time (see below).

3.2. Changing the WiFi Manager password

When opening the door to WiFi Manager for the first time, we recommend that you change the default password, **password**, directly via the **Connection to modem router window**.

Change the password now

Change password

You have indicated that you wish to change the password. Enter the old password, then the new one. Confirm the new password and then click the "Confirm and Connect" button.

Old password:

New password:

Confirm new password:

- Click the **Change the password now** button.

- Enter the **old** password (**password**, if you are doing this for the first time), the **new** password, which you will select, and then **confirm** the new password.






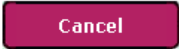


- Click **Confirm and Connect** to store your new password and connect.

The door to WiFi Manager opens to the **Home page** depicted below. You can now explore all of your Hercules Modem Router's functionalities.



3.3. Navigating within the WiFi Manager interface

The **WiFi Manager** interface has been designed to simplify navigation through the different menus. Nevertheless, should you ever feel a bit lost, you can always click the **Home page** button at any time to return to the Home page, the starting point for all of your Hercules Modem Router's functionalities.

Type	Description
	Button launching an action on your Hercules Modem Router or opening a new page.
	Name of the page currently displayed.
	Language in which the interface text is displayed.
	Button allowing you to return to the Home page.
	One of the most important buttons in WiFi Manager: if you do not click this button, no changes you have made will be applied or stored in the Hercules Modem Router.
	Button allowing you to cancel any changes and return to the previous page.
	Button allowing you to return to the previous page.
	Button allowing you to move on to the next page.

3.4. Connecting the modem router to your Internet account

You can replace your old ADSL modem with the Hercules Modem Router, which offers more extensive functionalities: it is an ADSL modem, a WiFi 802.11g router, a 10/100 LAN switch and an Internet firewall, all rolled into one.

Once your modem router's initialization is complete, your WiFi connection and your firewall are enabled. However, you must still enter your ADSL connection settings in order to be able to use the Internet. To do so, all you need is an account with an Internet Service Provider (ISP), an active ADSL line and all the information provided by your ISP, generally found in your confirmation of membership email or letter (username (or login), connection password...).

3.4.1. Configuring your ADSL connection

With WiFi Manager, you don't have to be a computer expert to configure your ADSL connection. A few items of information are all you will need to start enjoying your Internet access immediately, as the connection settings for the main service providers (Wanadoo, AOL, Free (bundled), Neuf Telecom...) are already integrated into your Hercules Modem Router.

Your ADSL connection

Connection Username (Login):

Connection Password:

Always stay connected:

Always stay connected:

Disconnect automatically after minutes of inactivity

- On the Home page, click **Your ADSL connection**.

If your ISP appears in the list displayed on-screen:

- In the **Your ADSL connection** page, enter your **Connection Username (Login)** and your **Connection Password** in the corresponding fields.

This information is found in your confirmation of membership email or letter sent to you by your ISP.

- If you wish, you can **Always stay connected**, which ensures that your Internet connection is always active.

- You can also set a time to disconnect after a certain period of inactivity by ticking the **Always stay connected box** and then entering the number of minutes you prefer.

If you do not use the Internet within this period of time, the modem disconnects. It will then reconnect automatically the next time you try to access a new web page on one of your computers.

If your ISP does not appear in the list displayed on-screen, or if you have specific connection settings:

Simply enter your connection settings manually (please refer to chapter 5. **Manually configuring your ADSL connection**).



Once you have configured your connection, don't forget to click the **Apply and Save** button to save your settings.

Connection status: Connected

Download speed: 2048 kbps
 Upload speed: 160 kbps
 IP address: 82.228.198.79

- At the bottom of the screen, verify that your modem router is properly connected.

If your modem router is connected:

- Have a look at the information in the **Download speed** (transfer speed of Internet data to your computer) and **Upload speed** (transfer speed of data on your computer to the Internet) sections.

This information is quoted in Kilobits per second. A download speed of 1024Kbps is the equivalent of 1 Megabit per second.

- Finally, you will find your computer's **IP address**, which you will need later on in WiFi Manager.

If your modem router is not connected:

- Verify that you have correctly entered your connection username and password.

- If you have entered either incorrectly, enter the information again.


- **Otherwise**, switch to manual configuration mode (please refer to chapter 5. **Manually configuring your ADSL connection**).

3.4.2. Testing your ADSL connection

Now that your ADSL connection has been configured on your Hercules Modem Router, you can carry out a first test of your connection and verify that you have access to the Internet.



During this test, leave the Ethernet cable connected.



- Launch an Internet browser (Internet Explorer, Netscape Navigator or Mozilla Firefox) on your computer.

- Enter the address **www.hercules.com**.

The Hercules website's home page should be displayed.

If your ADSL connection is working properly:

It is now time for you to learn how to master your WiFi network (please refer to chapter 3.5. **Mastering your WiFi network at your fingertips**).




Do not disconnect your Ethernet cable just yet; since your WiFi network has not yet been created, you will still need the cable to communicate with your modem router.

3.4.3. Resolving any difficulties in accessing WiFi Manager or the Internet

If you have not managed to connect to the WiFi Manager interface or to the Internet, your computer's settings may not be properly configured. The instructions below will help you to resolve this problem.

Note: the access paths mentioned below may vary slightly if you have modified the default display configuration in Windows XP (meaning the **Start** menu properties and **Control Panel** display).

Windows XP


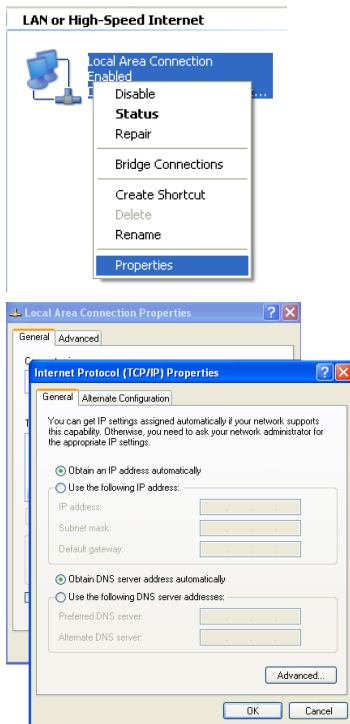


1. Click **Start/Control Panel**. Double-click **Network Connections**.
2. In the **LAN or High-Speed Internet** section, right-click the icon corresponding to your network adapter (or network bridge, if you have created one) and select **Properties**.
3. In the **General** tab of the **Local Area Connection Properties** window, scroll through the list and highlight **Internet Protocol (TCP/IP)**.
4. Click **Properties**, select **Obtain an IP address automatically** and **Obtain DNS server address automatically**.
5. Click **OK** to close the windows, then exit the **Control Panel**.

The Hercules Modem Router will now be able to assign an IP address to your computer.

An **IP address** is a unique address assigned by the router to the computer. Each computer has its own identity, via its IP address, allowing it to be identified within the network.

Windows 2000

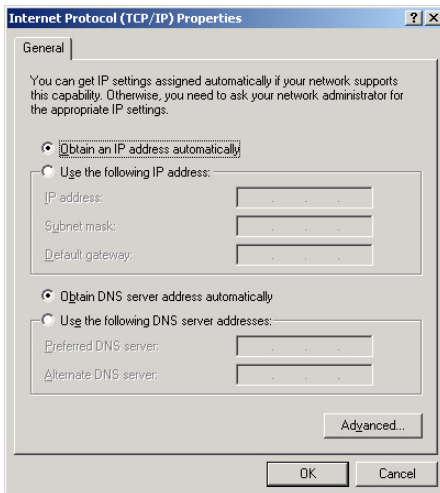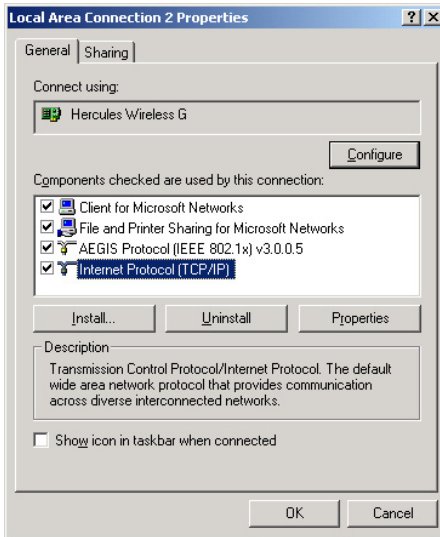



1. Click **Start/Settings/Control Panel**. Double-click **Network and Dial-Up Connections**.
2. Right-click the appropriate connection and select **Properties**.
3. In the **General** tab, highlight **Internet Protocol (TCP/IP)**.

4. Click **Properties** and select **Obtain an IP address automatically** and **Obtain DNS server address automatically**.
5. Click **OK** to close the windows, then exit the **Control Panel**.

The router will now be able to assign an IP address to your computer.

An **IP address** is a unique address assigned by the router to the computer. Each computer has its own identity, via its IP address, allowing it to be identified within the network.

Windows 98 SE/Me

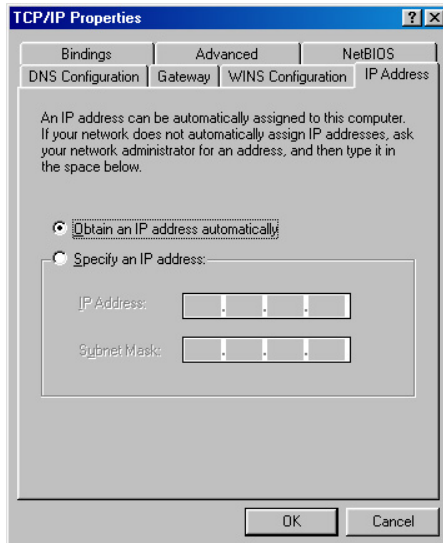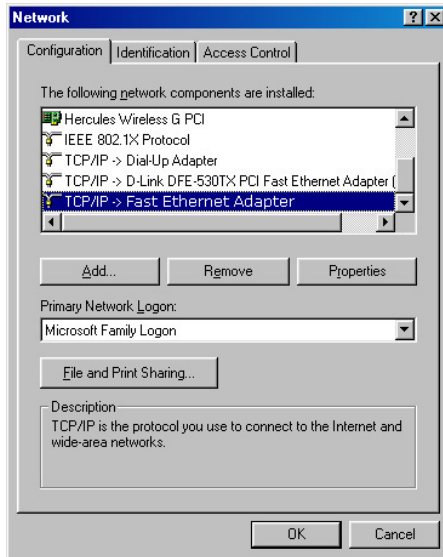

1. Click **Start/Settings/Control Panel**. Double-click **Network**.
2. In the **Configuration** tab of the **Network** window, highlight the name of your network adapter.

3. Click **Properties** and select **Obtain an IP address automatically** in the **IP Address** tab.
4. Click **OK** to close the windows, then exit the **Control Panel**.

The router will now be able to assign an IP address to your computer.

An **IP address** is a unique address assigned by the router to the computer. Each computer has its own identity, via its IP address, allowing it to be identified within the network.

3.5. Mastering your WiFi network at your fingertips

In this chapter, you will learn how to personalize your WiFi network and secure it against unwelcome intrusion attempts.



Configuration of your network is carried out via the Ethernet cable connecting your modem router to your computer. Once you have finished, you can disconnect this cable and explore all the subtleties of WiFi, described in chapter 4. **Welcome to the Wireless Attitude™!**

3.5.1. Personalizing your WiFi network

When the wireless access point (your Hercules Modem Router's WiFi function) is enabled, WiFi Manager displays the name of your network, the Radio Frequency (RF) channel used and the radio transmission power. These settings may be modified, under certain conditions.



Should you decide to modify certain settings, we recommend that you take care to follow the recommendations below.

To personalize your WiFi network:

Your WiFi connection parameters

WiFi network enabled:

The name of your network is:

The Radio Frequency (RF) channel used is:

The radio transmission power is:

Apply and Save

- On the Home page, select **Your WiFi connection parameters**.

The name of your network, the RF channel used, and the transmission power are displayed.

- Before personalizing your WiFi network, verify that the **WiFi network enabled** box is ticked.

- If you wish, you may personalize **The name of your network**, or SSID (Hercules, by default).

*The SSID (Service Set Identifier) is the unique name shared by the WiFi adapters and the access point in a wireless network. **Make sure that you do not lose or forget this name**, as you will need it to connect your WiFi devices.*

- If necessary, change the **Radio Frequency (RF) channel** used by the local area WiFi network to communicate (from 1 to 13).

*Change this setting **only if** another transmitter is using the same channel, which may result in a drop in your modem router's WiFi performance.*

- Modify the **radio transmission power** (from 0 to 100%) so that your network only transmits over the required distance (within your house or apartment, for example).

- Click the **Apply and Save** button to validate your settings.

The access point restarts. All computers or devices connected via WiFi are disconnected. The ADSL connection, however, remains active.

3.5.2. Securing your WiFi network using the Assistant

Creating a WiFi network is very useful if you have several wireless computers or devices, but how can you avoid having someone on the outside connect to your network without permission or intercept your unencrypted data exchanges? Thanks to the WiFi Security Assistant, you can define your own security choices step by step. To help you select the best level of security for your network, we invite you to consult the table below, which sums up the **5 types of security** supported by WiFi Manager.

Type	Level of security	Key used	Authentication
WEAK (WEP 64)	The lowest level of security, whereby single encryption is carried out on exchanged data. Each wireless client in the network must use the same key to decode the transmission.	64-bit (10 character) key in hexadecimal format. <i>A hexadecimal key is composed of numbers 0 to 9 and letters A to F (example: A123BCD45E for a 64-bit key).</i>	Open (no authentication), Shared (authentication method via shared key) or Auto (authentication when requested by the device).
MEDIUM (WEP 128)	Level of security identical to that of WEP 64. Only the key length is different.	128-bit (26 character) key in hexadecimal format. <i>A hexadecimal key is composed of numbers 0 to 9 and letters A to F.</i>	Open (no authentication), Shared (authentication method via shared key) or Auto (authentication when requested by the device).
Type	Level of security	Key used	Encryption type
HIGH (WPA-PSK)	Latest-generation heightened level of security, specially designed for environments such as a small office or the home, based on a pre-shared key.	Password with a minimum of 8 alphanumeric characters . <i>An alphanumeric character corresponds either to a number (0-9), or to a letter (a-z or A-Z).</i>	TKIP
Type	Level of security	IP address/Port	Renewal interval/Shared key
PRO (radius)	Heightened level of security reserved for professional environments, using the RADIUS protocol to authenticate and authorize users accessing the network via a remote connection.	IP address of authentication server. Port: 1812 by default.	Renewal interval: 3600 sec by default. Key shared with authentication server.
PRO (802.1x)	Heightened level of security reserved for professional environments, using the 802.1x protocol to authorize physical access to a local area network following an encryption and authentication phase.	IP address of authentication server. Port: 1812 by default.	Renewal interval: 3600 sec by default. Key shared with authentication server.



You must not select a level of security in WiFi Manager more advanced than that supported by your WiFi adapters. For example, if your adapters only support the **WEAK (WEP 64)** or **MEDIUM (WEP 128)** levels, you should not select the **HIGH (WPA-PSK)** level.

WiFi network enabled:


WiFi security enabled: YES NO

Security level: HIGH (WPA-PSK) Encryption: TKIP


Password:

Assistant

Password (key) with a minimum of 8 alphanumeric characters. An alphanumeric character corresponds either to a number (0-9), or a letter (a-z or A-Z).

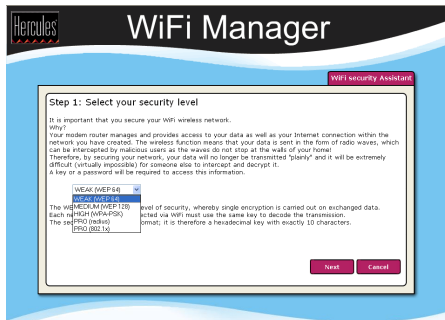

If you have selected WEAK (WEP 64) or MEDIUM (WEP 128) security:

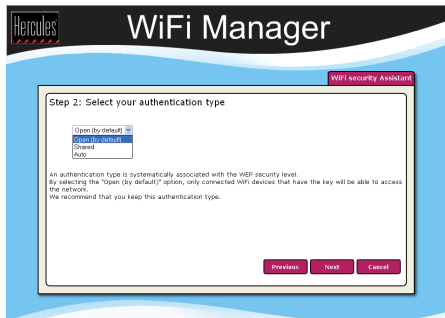

1. Before enabling security for your WiFi network, verify that the **WiFi network enabled** box is ticked.
2. To open the Assistant, enable WiFi security by ticking the **YES** box in the **Your WiFi connection parameters** window, then click the **Assistant** button located in the lower left-hand corner of the window.
3. Read the text explaining the concept of **security**.
4. Select your **level of security**: **WEAK (WEP 64)**, **MEDIUM (WEP 128)**, **HIGH (WPA-PSK)**, **PRO (radius)** or **PRO (802.1x)**, according to the explanations provided by the text.
5. Click **Next**.

6. Read the text explaining the concept of **authentication**.
7. Select the **authentication type**: **Auto** (authentication carried out when requested by the device), **Open (no authentication)** or **Shared** (authentication via shared key).

We recommend that you keep the default authentication type.

8. Click **Next**.

WiFi Manager

WiFi security Assistant

Step 3: Enter your choice of WEP security key

A123BCD45E

You must define and enter your WEP 64 key, containing exactly 10 hexadecimal characters composed of numbers (0 to 9) and/or letters (A to F), without spaces or punctuation.
Example: A123BCD45E
Make sure to write down the key you have selected, as it will be required of each computer or WiFi device that you authorize to connect to your network.
You will therefore have to enter the key again.

Previous Finish Cancel

- Enter a **WEP** security key according to the level of security you have selected: 10 hexadecimal characters for a 64-bit WEP key, 26 hexadecimal characters for a 128-bit WEP key.

A hexadecimal character is composed of numbers 0 to 9 and letters A to F (example: A123BCD45E for a 64-bit key).

- Click **Finish** to validate these settings.
- Click **Apply and Save** to apply and save these settings.

If you have selected HIGH (WPA-PSK) security:

WiFi Manager

WiFi security Assistant

Step 2: Enter your choice of WPA-PSK password

Myhouse02

You must define and enter a password, containing a minimum of 8 alphanumeric characters. An alphanumeric character corresponds either to a number (0-9), or a letter (a-z or A-Z), without spaces or punctuation.
Example: Myhouse02
Make sure to write down your password, as it will be required of each computer or WiFi device attempting to connect to your network. You will therefore have to enter the password again.
(Example: If a friend wants to connect to or her computer).

Previous Finish Cancel

- Read the text explaining the concept of a **WPA-PSK** key.
- Enter the **password** of your choice (minimum of 8 alphanumeric characters).

An alphanumeric character corresponds either to a number (0-9), or to a letter (a-z or A-Z).

- Click **Finish**.
- Click **Apply and Save** to apply and save these settings.

If you have selected PRO radius or PRO 802.1x security:

WiFi Manager

WiFi security Assistant


Step 2: Enter your authentication server's address

Server's IP address: 82.228.188.79
Server port: 1812

Here you must enter the IP address as well as the UDP Port (1812 by default) used by your authentication server.

Previous Next Cancel

- Enter your authentication server's **IP address** and port number.
- Click **Next**.

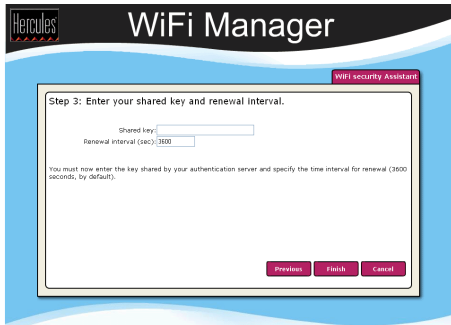

8. Enter the **shared key** and **renewal interval**.
9. Click **Finish**.
10. Click **Apply and Save** to apply and save these settings.



If you have mastered the concept of WiFi security, you can use the (less user-friendly) method of directly entering your security parameters. In this case, don't forget to click the **Apply and Save** button, or else your choices will not be applied or saved.

3.5.3. Limiting access to your WiFi network to certain WiFi computers and devices

Filtering by **MAC address** is a complement to your security parameters, allowing you to select the wireless computers and devices authorized to connect to your local area WiFi network.

A **MAC address** is a unique address created by the builder of the network device (WiFi or Ethernet), serving to identify this element within a network.



Before enabling filtering, we recommend that you connect via WiFi all computers you wish to authorize.

To enable filtering by MAC address:

WiFi network enabled:

- Before you can enable filtering by MAC address, verify that your **WiFi network** is also enabled.

MAC address filtering enabled: YES NO

- Tick the **Yes** box next to **MAC address filtering enabled**.


To add a computer to the list:




- Click the **ADD** button.

The Add MAC Filtering Assistant is launched. A text explaining the concept of filtering by MAC address is displayed.

- Click **Next**.

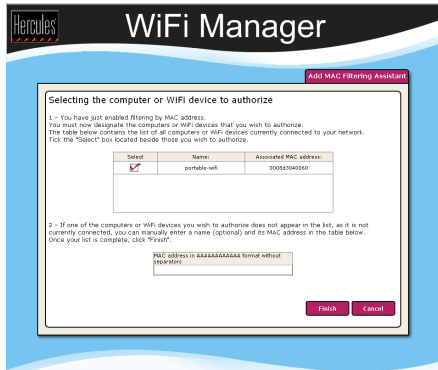

Apply and Save

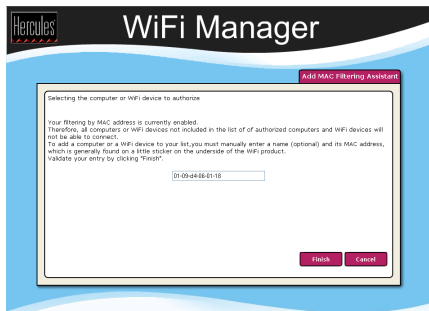

Apply and Save

If you are using this function for the first time:

The list of all WiFi computers or devices currently connected to your network is displayed in the first table.

- Tick the **Select** box next to the names of the connected computers and devices that you wish to authorize.

- If a computer is not connected, you can add it manually in the second table.

- Click **Finish**.

The list of all WiFi computers and devices authorized to connect to your network is displayed in the table.

- Click the **Apply and Save** button to validate your settings.

If you have already created a filtering list:

Any new computer or device must be added manually.

- Manually enter its MAC address (in AAAAAA format, without separators).

- Click **Finish**.

This address has been added to the list of WiFi computers and devices authorized to connect.

- Click the **Apply and Save** button to validate your settings.



Once you have enabled the filtering by MAC address function, **only** the computers and devices appearing in this list will be authorized to connect to your Hercules Modem Router.



If friends come to visit with their own WiFi computer or device, or if you wish to connect new WiFi devices, don't forget to **add their MAC address** to the filtering list, or else they will never be able to connect.

To remove a computer from the list:

MAC address filtering enabled: YES NO

Name	Associated MAC address	Remove
My computer	00-08-03-05-00-17	

- In the **Remove** column, click the next to the computers or devices you wish to remove from the filtering list.

- Click **Apply and Save**.

3.5.4. Disabling your WiFi network

If you wish to use your modem router as a wired router only (that is to say, connected to the computer via the Ethernet port and not by WiFi), simply un-tick the **WiFi network enabled** box. The WiFi LED on the router switches off.

3.6. The firewall: your ultimate protection against Internet attacks

Like a secure fortress, your network is protected by a drawbridge and ramparts that are impossible to scale. On top of this, all of your defenses are in a state of alert to repel any intrusion attempts. It is possible, however, to lower these defenses from time to time, in order to authorize your computers to access specific Internet services (P2P, web/FTP servers...), or simply to limit access on a specific computer to certain Internet services. For more information, please refer to chapters **6.2.1. Opening doors in your firewall for certain Internet services** and **6.2.2. Limiting access of one of your network computers to Internet services**.



We do not recommend disabling your Internet firewall, as doing so will lower the defenses of your secure fortress, which will no longer be able to block and repel intrusion attempts via the Internet.



If your computer is equipped with a **software firewall** (Norton Personal Firewall, Windows Service Pack 2 Firewall, McAfee Personal Firewall...), **disable it** when you connect to the modem, as your modem router's firewall is sufficiently strong on its own, or adopt the same configuration settings as those established for your modem router in order to avoid any possible conflicts. If you go somewhere else with your computer, however, or have to connect to other networks, you can **re-enable** your software firewall.

Be careful not to confuse a firewall with an antivirus program!

An **antivirus program** analyzes the contents of your computer, your emails, files you have downloaded from the Internet, etc., and detects, blocks and/or removes any viruses, worms and Trojans in order to ensure that your computer functions properly.

Your **firewall** hides your computer on the network, monitors the Internet data arriving at your computer and blocks intrusion attempts to stop computer hackers from stealing your personal information.

4. WELCOME TO THE WIRELESS ATTITUDE™!

Now that you have mastered the main functionalities of WiFi Manager, it is time to move on to a few practical applications. In the following chapters, we will show you how wireless computing is closely linked to user-friendliness and ease of use. Sharing your folders, your printer, or letting friends use your ADSL connection for online gaming are some examples of the things we will help you to do. Enter the world of wireless and join in the **Wireless Attitude™!**

4.1. A few important points to bear in mind before getting started

We advise you to follow the instructions provided hereinafter for each of your computers:

- The procedures described in this chapter differ according to the various operating systems discussed. Please ensure that you refer to the chapters corresponding to your operating system.
- These procedures also apply to the computers or devices directly connected to your modem router via an Ethernet cable.
- To share an ADSL connection, your Hercules Modem Router must be switched on and your ADSL line must be active.

Reminder: the WiFi network you have just finished setting up is an **Infrastructure** type network (as opposed to **Ad hoc** mode), as it is composed of an **access point** and one or more computers.


4.2. Computers running Windows XP: Sharing folders, a printer or an ADSL connection

A simple solution for sharing folders, a printer or an **ADSL** connection in Windows XP is to use the **Network Setup Wizard**. This Wizard will help you create a real home network.

Note: the access paths mentioned below may vary slightly if you have modified the default display configuration in Windows XP (meaning the Start menu properties and Control Panel display).

4.2.1. Windows XP: Using the Network Setup Wizard in an Infrastructure network


Proceed as follows for each computer:

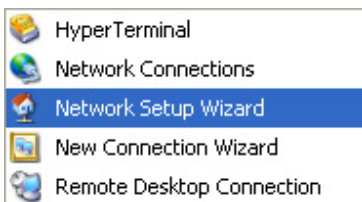

1. Click **Start/All Programs/Accessories/Communications/ Network Setup Wizard**.


The Network Setup Wizard is launched.

2. Click **Next** twice.

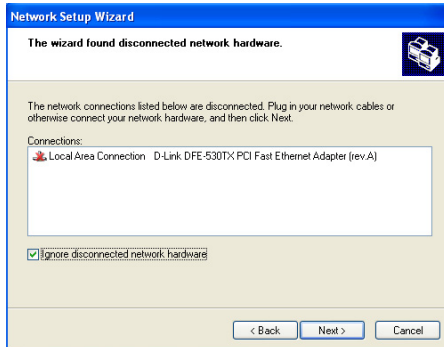


The window opposite may appear if **The Wizard found disconnected network hardware**.

- If your Hercules Wireless Adapter wireless network connection is not displayed in the list, tick the **Ignore disconnected network hardware** box, then click **Next**. Otherwise, exit the Wizard by clicking **Cancel** and establish the connection from your network device to your router (if you use a Hercules Wireless G PCI, USB or PCMCIA adapter, please refer to the "The WiFi Station utility" chapter of your User Manual).

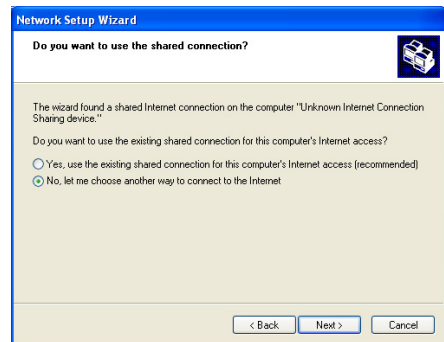


The window opposite may appear if **The Wizard found a shared Internet connection on the computer**.

- Select **No, let me choose another way to connect to the Internet**, then click **Next**.

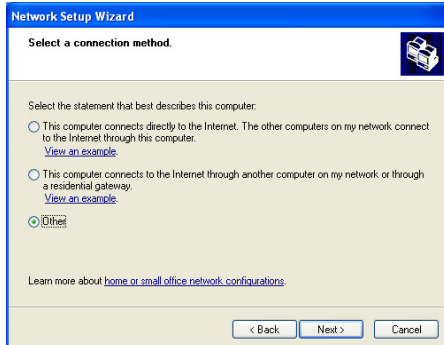


- In the **Select a connection method** window, select the **Other** option.

- In the following window, select **This computer connects to the Internet directly or through a network hub**, then click **Next**.

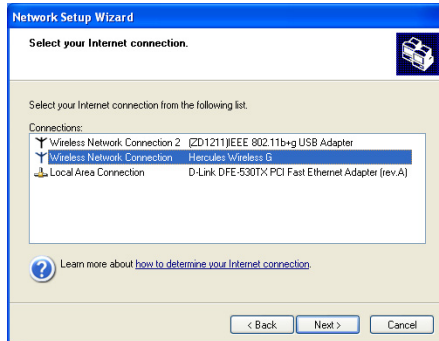


7. If the window opposite appears, select the Hercules Wireless G wireless network connection, then click **Next**.

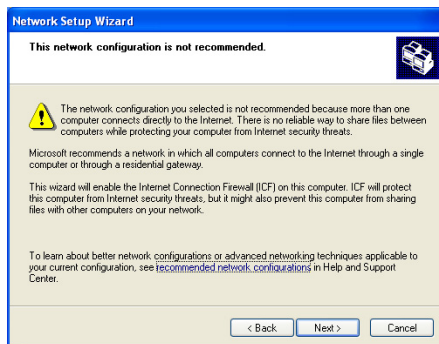

8. When this warning screen appears, ignore it by clicking **Next**.

If you are using the Hercules modem router, your computers are already protected by the integrated firewall.

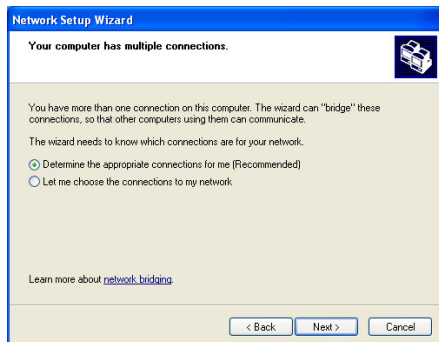

9. If your computer has at least three connections (or network devices), the window opposite appears. In this case, let the Wizard determine the appropriate connections.
10. Click **Next**.

11. Enter the computer name and a description, if required.

Give the computer a name that is unique and sufficiently distinctive, making it easy to recognize on your network (my-computer, wifi-computer or julie, for example).

12. Click **Next**.

13. Enter the **workgroup** name (HOME, OFFICE or HERCULES, for example) and a description, if required.

The workgroup name must be identical (be sure to respect the case of letters) for all computers you wish to link together in a network.


14. Click **Next**.

15. Verify the configuration settings you have entered in the window that appears, then click **Next**.

The Wizard configures the computer for the home network. This may take a few minutes.

16. Before completing the procedure, you may select the **Create a Network Setup Disk** option. This consists of copying this Wizard onto a storage medium (your choice of floppy disk or USB key) so that it can be launched on computers equipped with operating systems other than Windows XP.

This operation is carried out automatically, once you have selected a medium for saving the Wizard.

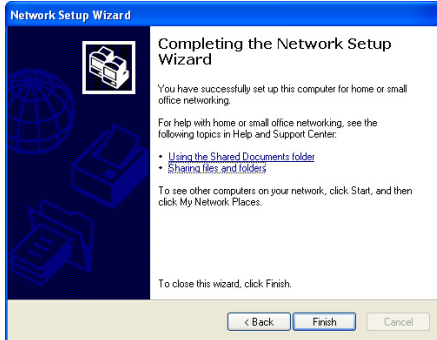

17. Click **Finish** to exit the Wizard.

Once the procedure is finished, Windows XP may prompt you to restart your computer.




The procedures described in this chapter are specific to Windows XP. For all other questions related to sharing folders, a printer or an Internet connection, or on using Windows, please refer to the Windows online help utility.



The procedures described in this chapter are specific to Windows XP. For all other questions related to sharing folders, a printer or an Internet connection, or on using Windows, please refer to the Windows online help utility.

4.2.2. Windows XP: Sharing folders

After having configured all of your computers using the Network Setup Wizard, you can now share data located on different disk drives, as long as the user has authorized access.

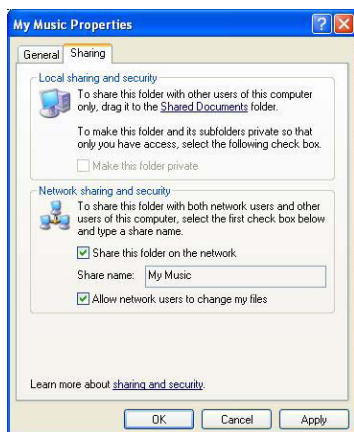

1. Select the folder you wish to share, without opening it.



2. Right-click the folder. Select **Sharing and Security**.
3. In the **Network sharing and security** section of the **Sharing** tab, tick the **Share this folder on the network** box.
4. On the **Share name** line, enter the folder name as it will be displayed on the network (12 characters maximum to ensure compatibility with other operating systems).

You can also tick the **Allow network users to change my files** box. In this case, the user will be able to read files and save any changes. If this box is not ticked, the shared files can only be read, and not changed.



The [Shared folder name] Properties window is divided into two sections. **Local sharing and security** only allows for the sharing of files among several users on the same PC. The files are then placed in a **Shared Documents** folder. **Network sharing and security**, however, allows for the sharing of files among more than one computer.



5. Click **Apply** to validate your choices, then click **OK** to close the window.

An icon representing a hand beneath the folder indicates that the folder is now shared.



You can only share the contents of a folder, and not an individual file. We therefore recommend that you create a folder specifically for this purpose where you will put files to be shared.

4.2.3. Windows XP: Accessing shared folders

To easily access folders set up for sharing by several computers, it is preferable that the computers belong to the same workgroup. In Windows XP, the workgroup name has been defined using the Network Setup Wizard.



1. Click **Start/My Computer**.
2. Click **My Network Places**, then click **View workgroup computers**.

You directly access the list of computers in your workgroup.

3. Double-click the computer that is sharing the folders you wish to access.

All shared folders appear.


4.2.4. Windows XP: Sharing a printer

It is possible to put a printer on the network and share it with all computers in the house equipped with a WiFi adapter.



To access a printer on the network, the printer must be set up for sharing on the computer where it is connected and installed.

On the computer connected to the printer:

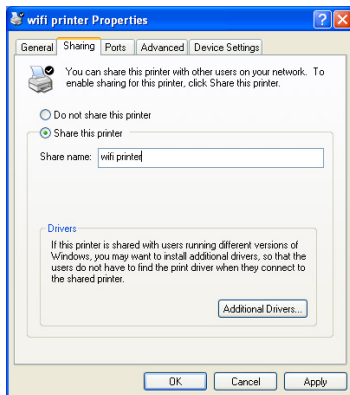

1. Click **Start/Control Panel/Printers and Other Hardware/Printers and Faxes**.
2. Right-click the printer and select **Sharing**.
3. In the **Sharing** tab, select the **Share this printer** radio button and enter a name for your printer.

Give the printer a name that is unique and sufficiently distinctive, making it easy to recognize (my-printer or home laser printer, for example). If one of your computers is running Windows 98 SE, we recommend that the sharing name not exceed 12 characters (without spaces) in order to ensure its compatibility with this operating system.


4. Click **Apply**, then **OK**.

On the computers that will use the shared printer:



1. Click **Start/Control Panel/Printers and Other Hardware/Printers and Faxes**. In the **Printer Tasks** section, select **Add a printer**.

2. The **Add Printer Wizard** is launched. Click **Next**.

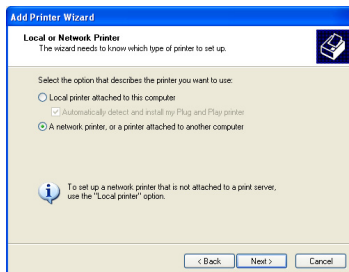

3. Select the **A network printer, or a printer attached to another computer** option, then click **Next**.

4. In the window that appears, click **Next** to launch the search for shared printers.



5. In the list displayed, double-click the computer connected to the printer.

6. Select the shared printer, then click **Next**.

7. If you wish, set the shared printer as the default printer, then click **Next**.




8. Click **Finish** to exit the Wizard.


You can now use the network printer thanks to your WiFi connection. For more information on sharing a printer, please refer to your printer's manual.

4.2.5. Windows XP: Modifying a workgroup name

It may happen that you need to change the name of your workgroup (advanced users only). To do so, proceed as follows:

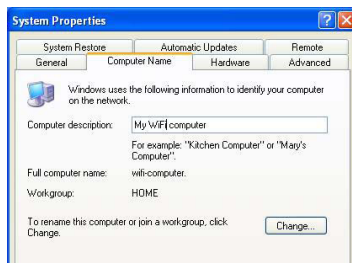

1. Click **Start/Control Panel/Performance and Maintenance/System**.
2. In the **System Properties** window, select the **Computer Name** tab.
3. Click the **Change...** button.

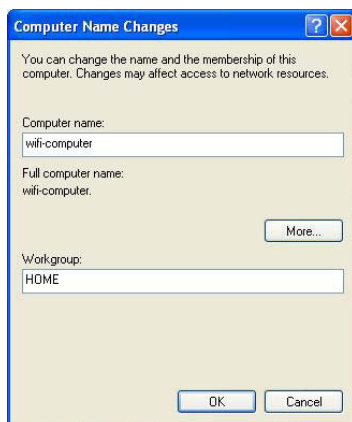


4. In the **Computer Name** zone, enter a name sufficiently distinctive that it can easily be recognized in the list of computers for the **workgroup** (my-computer, wifi-computer or julie, for example).
5. In the **Workgroup** zone, enter a name for the group (HOME, OFFICE or HERCULES, for example).

The workgroup name must be identical (be sure to respect the case of letters) for all computers you wish to link together in a network.

6. A Windows message indicates that the task has been carried out successfully and that you must restart the computer.
7. Repeat this procedure for each computer.

4.2.6. Windows XP: Manually enabling or disabling your adapter's WiFi connection (advanced users)

You can manually enable or disable your adapter's WiFi connection for a variety of reasons: to temporarily avoid connecting to networks, save battery power, etc.

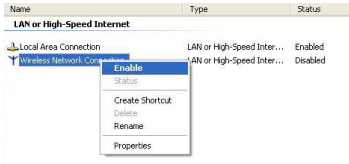

- Click **Start/Connections/Show All Connections**.

Verify that your Hercules Wireless G wireless network connection is listed.


- If its status is **Disabled**, right-click your **Wireless Network Connection** and select **Enable**.

- If its status is **Enabled**, right-click your **Wireless Network Connection** and select **Disable**.

4.3. Computers running Windows 2000: Sharing folders, a printer or an ADSL connection

To create a network of computers, share data, a printer or an **ADSL** connection in Windows 2000, it is preferable that the computers belong to the same **workgroup**.

4.3.1. Creating a workgroup in Windows 2000

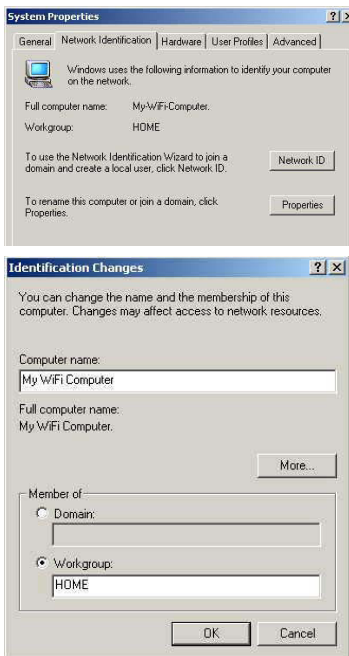

1. Click **Start/Settings/Control Panel**. Double-click **System**.
2. In the **System Properties** window, select the **Network Identification** tab.
3. Click the **Properties** button.

4. In the **Computer name** zone, enter a name sufficiently distinctive that it can easily be recognized in the list of computers for the **workgroup** (my-computer, wifi-computer or julie, for example).
5. In the **Workgroup** zone, enter a name for the group (HOME, OFFICE or HERCULES, for example).

The workgroup name must be identical (be sure to respect the case of letters) for all computers you wish to link together in a network.

6. Click **OK**. A Windows message indicates that the task has been carried out successfully and that you must restart the computer.
7. Click **OK** once more.

4.3.2. Windows 2000: Sharing folders



1. Select the folder you wish to share, without opening it.
2. Right-click the folder. Select **Sharing**.
3. In the **Sharing** tab, select **Share this folder**.
4. On the **Share name** line, enter the folder name as it will be displayed on the network (12 characters maximum to ensure compatibility with other operating systems).

*You can also limit access to the folder by selecting a limited number of users and the type of access by clicking the **Permissions** button.*

5. Click **Apply**, then **OK**.

4.3.3. Windows 2000: Accessing shared folders



1. Click **Start/Programs/Accessories/Windows Explorer**.
2. Double-click **My Network Places**, **Entire Network**, then **Microsoft Windows Network**.
3. Double-click your workgroup.

You access the list of the computers in your workgroup.

4. Double-click the computer that is sharing the folders you wish to access.

All shared folders appear.


4.3.4. Windows 2000: Sharing a printer

It is possible to put a printer on the network and share it with all computers in the house equipped with a WiFi adapter.



To access a printer on the network, the printer must be set up for sharing on the computer where it is connected and installed.

On the computer connected to the printer:

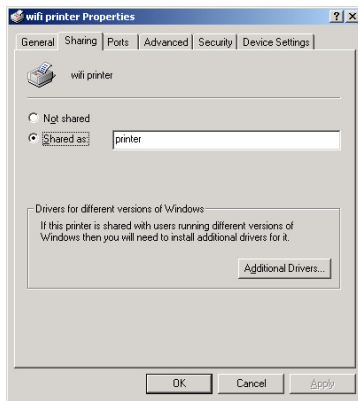


1. Click **Start/Settings/Printers**.
2. Right-click the printer and select **Sharing....**
3. In the **Sharing** tab, select the **Shared as:** radio button and enter a name for your printer.


Give the printer a name that is unique and sufficiently distinctive, making it easy to recognize (my-printer or home laser printer, for example). If one of your computers is running Windows 98 SE, we recommend that the sharing name not exceed 12 characters (without spaces) in order to ensure its compatibility with this operating system.

4. Click **Apply**, then **OK**.


On the computers that will use the shared printer:

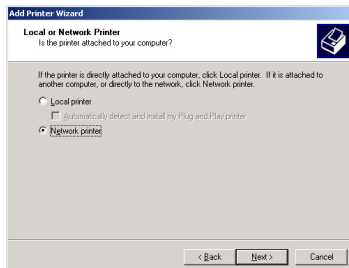

1. Click **Start/Settings/Printers**. Double-click the **Add Printer** icon.
2. The **Add Printer Wizard** is launched. Click **Next**.
3. Select the **Network printer** option, then click **Next**.
4. Click **Next** to locate the shared printer.

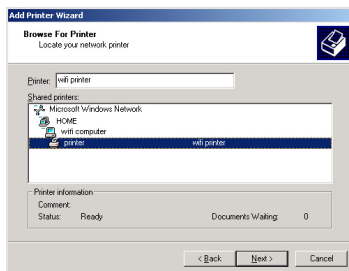

5. In the list displayed, double-click the computer connected to the printer.
6. Select the shared printer, then click **Next**.

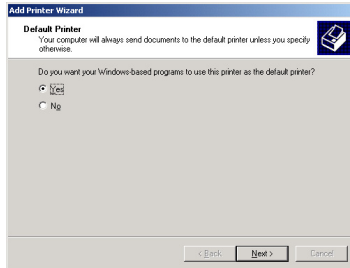


7. If you wish, set the shared printer as the default printer, then click **Next**.
8. Click **Finish** to close the Wizard.


You can now use the network printer thanks to your WiFi connection. For more information on sharing a printer, please refer to your printer's manual.

4.3.5. Windows 2000: Modifying a workgroup name

It may happen that you need to change the name of your workgroup (advanced users only). To do so, proceed as follows:

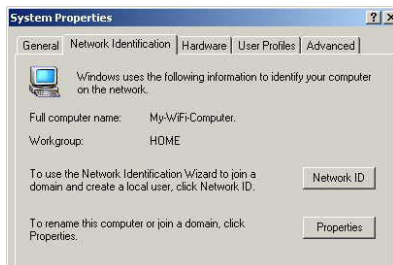

1. Click **Start/Settings/Control Panel**. Double-click **System**.
2. In the **System Properties** window, select the **Network Identification** tab.
3. Click the **Properties** button.

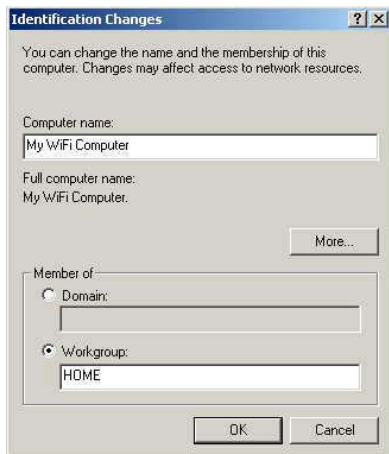


4. In the **Computer name** zone, enter a name sufficiently distinctive that it can easily be recognized in the list of computers for the **workgroup** (my-computer, wifi-computer or julie, for example).
5. In the **Workgroup** zone, enter a name for the group (HOME, OFFICE or HERCULES, for example).

The workgroup name must be identical (be sure to respect the case of letters) for all computers you wish to link together in a network.


6. Click **OK**. A Windows message indicates that the task has been carried out successfully and that you must restart the computer.
7. Repeat this procedure for each computer.

4.3.6. Windows 2000: Sharing an ADSL connection in an Infrastructure network


Proceed as follows for each computer that will use the shared Internet connection:

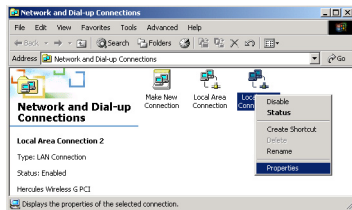

1. Click **Start/Settings/Network and Dial-up Connections**.
2. Select the connection to the local area network corresponding to your Hercules Wireless G device.
3. Right-click the connection and select **Properties**.

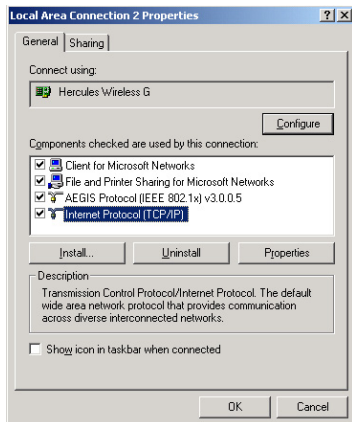

4. In the **Local Area Connection Properties** window, select **Internet Protocol (TCP/IP)**.
5. Click **Properties**.

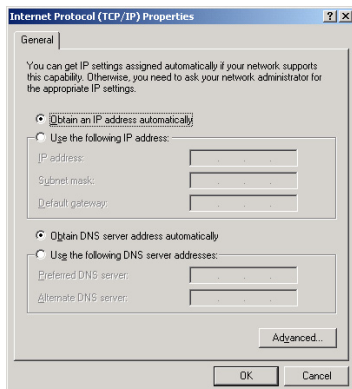

6. In the **Internet Protocol (TCP/IP) Properties** window, select **Obtain an IP address automatically** and **Obtain DNS server address automatically**.
7. Click **OK** to close the windows.

Windows may prompt you to restart your computer.

To access the Internet, you can now simply launch your Internet browser.

4.3.7. Windows 2000: Manually enabling or disabling your adapter's WiFi connection (advanced users)

You can manually enable or disable your adapter's WiFi connection for a variety of reasons: to temporarily avoid connecting to networks, save battery power, etc.

To manually enable or disable your Hercules Wireless G adapter's WiFi connection in Windows 2000:

- Access the **Device Manager**.
- Select your Hercules Wireless G adapter in the list of network adapters.
- Right-click your adapter and select **Properties**.
- To enable your adapter, select **Enable**. To disable it, select the **Disable** option.

For more information on manually enabling or disabling the adapter in Windows 2000, please refer to the Windows online help utility.

4.4. Computers running Windows Me: Sharing folders, a printer or an ADSL connection

A simple solution for sharing folders, a printer or an **ADSL** connection in Windows Me is to use the **Home Networking Wizard**. This Wizard will help you create a real home network.


4.4.1. Windows Me: Using the Home Networking Wizard in an Infrastructure network




1. Click **Start/Programs/Accessories/Communications/Home Networking Wizard**.

The Wizard is launched.


2. Click **Next**.

 If you have already used this Wizard on this computer, the **Setup Options** panel appears. Select **I want to edit my Home Networking settings on this computer**, then click **Next**.

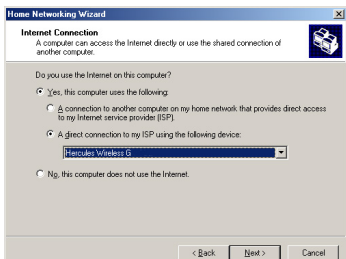


3. In the **Internet Connection** window, select the **A direct connection to my ISP using the following device:** option.

4. Select your Hercules Wireless G adapter in the drop-down list, then click **Next**.

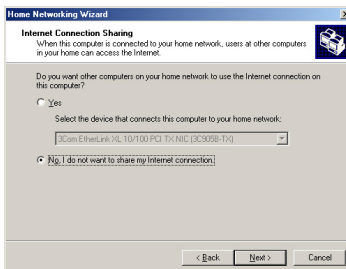

5. If the **Internet Connection Sharing** window appears, select **No, I do not want to share my Internet connection**.

6. Click **Next**.

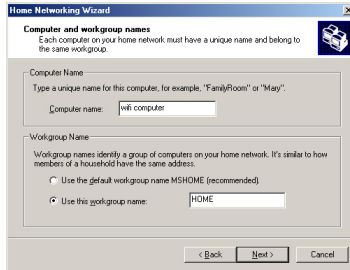


7. Enter the computer name.

Give the computer a name that is unique and sufficiently distinctive, making it easy to recognize in the list of workgroup computers (my-computer, wifi-computer or julie, for example).

8. Select the **Use this workgroup name** option and enter the **workgroup** name (HOME, OFFICE or HERCULES, for example).

The workgroup name must be identical (be sure to respect the case of letters) for all computers you wish to link together in a network.

9. Click **Next**.

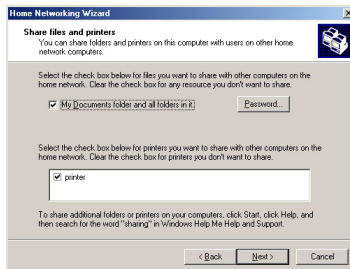

10. If you wish, you can enable sharing for the My Documents folder by ticking the **My Documents folder and folders in it** box. In this case, the Wizard will prompt you to enter a password.


11. If you wish, you can enable sharing of your printer by selecting it in the list.

12. Click **Next**.



13. Before completing the procedure, you may copy this Wizard onto a setup disk so that it can be launched on computers equipped with operating systems other than Windows Me. In this case, select the **Yes, create a Home Networking Setup disk** option.

This operation is carried out automatically, once you have selected a medium for saving the Wizard.

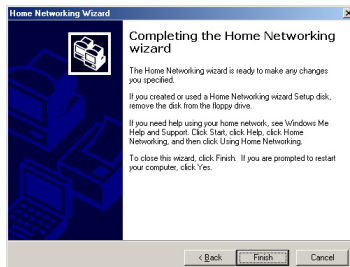


14. Click **Finish** to exit the Wizard.

Once the procedure is finished, Windows Me prompts you to restart your computer. Once your computer has restarted, a message invites you to configure your other computers.


4.4.2. Windows Me: Sharing folders

After having configured all of your computers using the Home Networking Wizard, you can now share data located on different disk drives, as long as the user has authorized access.

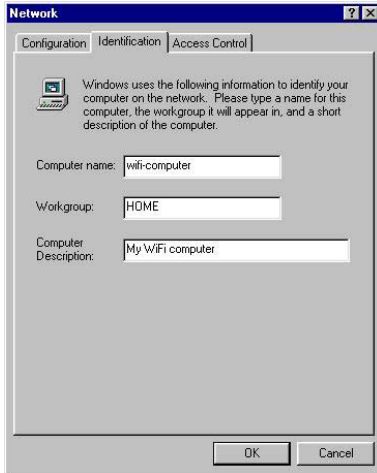

1. Select the folder you wish to share, without opening it.
2. Right-click the folder. Select **Sharing**.
3. In the **Sharing** tab, select **Shared As**.
4. On the **Share Name** line, enter the folder name as it will be displayed on the network (12 characters maximum).

You can also limit access to the folder by selecting the type of access and a password.

 If the **Sharing** tab does not appear, you must enable file sharing.

1. Click **Start/Settings/Control Panel**. Double-click **Network**.
2. In the **Network** window, click the **File and Print Sharing...** button.
3. Tick the **I want to be able to give others access to my files** box.

Windows may prompt you to insert the installation CD-ROM.

4.4.3. Windows Me: Accessing shared folders

To easily access folders set up for sharing by several computers, it is preferable that the computers belong to the same workgroup. In Windows Me, the workgroup name has been defined using the Home Networking Wizard.



1. Click **Start/Programs/Windows Explorer**.
2. Double-click **Network Neighborhood** and expand it.

You access the list of the computers in your workgroup.

3. Double-click the computer that is sharing the folders you wish to access.

All shared folders appear.


4.4.4. Windows Me: Sharing a printer

It is possible to put a printer on the network and share it with all computers in the house equipped with a WiFi adapter.



To access a printer on the network, the printer must be set up for sharing on the computer where it is connected and installed.

On the computer connected to the printer:

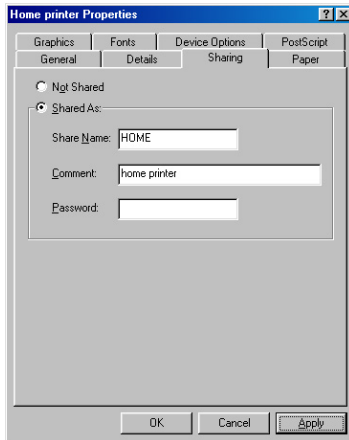

1. Click **Start/Settings/Printers**.
2. Right-click the printer and select **Sharing**.
3. In the **Sharing** tab, select the **Shared As** radio button and enter a name for your printer.

Give the printer a name that is unique and sufficiently distinctive, making it easy to recognize (printer or wifi printer, for example).

4. Click **Apply**, then **OK**.




If the **Sharing** tab does not appear, you must enable file sharing.




1. Click **Start/Settings/Control Panel**. Double-click **Network**.
2. In the **Network** window, click the **File and Print Sharing...** button.
3. Tick the **I want to be able to allow others to print to my printer(s)** box.

Windows may prompt you to restart your computer.


On the computers that will use the shared printer:

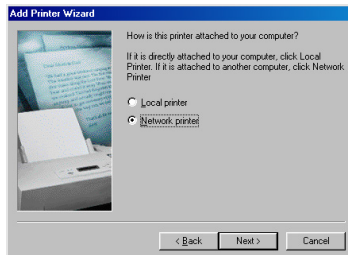

1. Click **Start/Settings/Printers**. Double-click the **Add Printer** icon.
2. The **Add Printer Wizard** is launched. Click **Next**.
3. Select the **Network printer** option, then click **Next**.
4. Click **Browse...** to locate the shared printer.

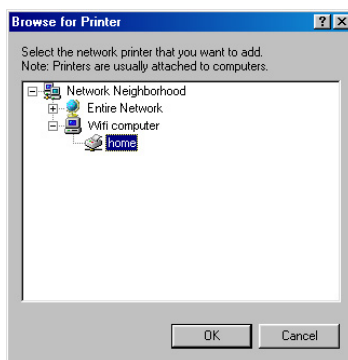

5. In the list displayed, double-click the computer connected to the printer.
6. Select the shared printer, then click **OK**.
7. Click **Next**.

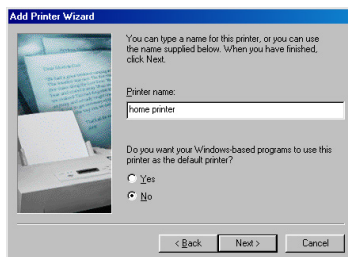


8. If you wish, set the shared printer as the default printer, then click **Next**.
9. Click **Finish** to close the Wizard.

You can now use the network printer thanks to your WiFi connection. For more information on sharing a printer, please refer to your printer's manual.

4.4.5. Windows Me: Modifying a workgroup name

It may happen that you need to change the name of your workgroup (advanced users only). To do so, proceed as follows:

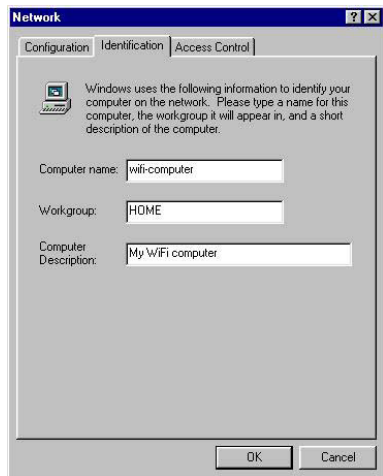

1. Click **Start/Settings/Control Panel**. Double-click **Network**.
2. Select the **Identification** tab.
3. In the **Computer name** zone, enter a name sufficiently distinctive that it can easily be recognized in the list of computers for the **workgroup** (my-computer, wifi-computer or julie, for example).
4. In the **Workgroup** zone, enter a name for the group (HOME, OFFICE or HERCULES, for example).

The workgroup name must be identical (be sure to respect the case of letters) for all computers you wish to link together in a network.

5. Click **OK**. A Windows message indicates that the task has been carried out successfully and that you must restart the computer.
6. Repeat this procedure for each computer.

4.4.6. Windows Me: Manually enabling or disabling your adapter's WiFi connection (advanced users)

You can manually enable or disable your adapter's WiFi connection for a variety of reasons: to temporarily avoid connecting to networks, save battery power, etc.

To manually enable or disable your Hercules Wireless G adapter's WiFi connection in Windows Me:


- Access the **Device Manager**.
- Select your Hercules Wireless G adapter in the list of network adapters.
- Right-click your adapter and select **Properties**.
- To enable your adapter, select **Enable**. To disable it, select the **Disable** option.

For more information on manually enabling or disabling the adapter in Windows Me, please refer to the Windows online help utility.

4.5. Computers running Windows 98 SE: Sharing folders, a printer or an ADSL connection

To create a network of computers, share data, a printer or an **ADSL** connection in Windows 98 SE, it is preferable that the computers belong to the same **workgroup**.

4.5.1. Windows 98 SE: Creating a workgroup

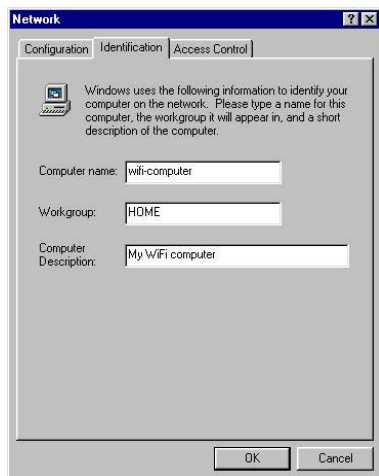


1. Click **Start/Settings/Control Panel**. Double-click **Network**.
2. Select the **Identification** tab.
3. In the **Computer name** zone, enter a name sufficiently distinctive that it can easily be recognized in the list of computers for the **workgroup** (my-computer, wfi-computer or julie, for example).
4. In the **Workgroup** zone, enter a name for the group (HOME, OFFICE or HERCULES, for example).

The workgroup name must be identical (be sure to respect the case of letters) for all computers you wish to link together in a network.

5. Click **OK**. Windows prompts you to restart your computer.
6. Repeat this procedure for each computer.

Note: to modify the name of a workgroup, follow the same procedure.

4.5.2. Windows 98 SE: Sharing folders

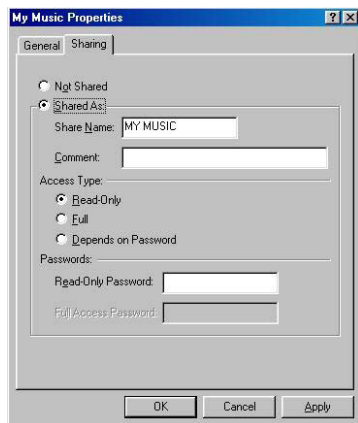


1. Select the folder you wish to share, without opening it.
2. Right-click the folder. Select **Sharing**.
3. In the **Sharing** tab, select **Shared As**.
4. On the **Share Name** line, enter the folder name as it will be displayed on the network (12 characters maximum).

You can also limit access to the folder by selecting the type of access and a password.



If the sharing tab does not appear, you must enable file sharing.

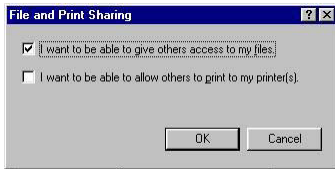

1. Click **Start/Settings/Control Panel**. Double-click **Network**.
2. In the **Network** window, click the **File and Print Sharing...** button.
3. Tick the **I want to be able to give others access to my files** box, then click **OK**.
3. Click **OK** to close the window.

Windows may prompt you to insert the installation CD-ROM and restart the computer.

4.5.3. Windows 98 SE: Accessing shared folders



1. Click **Start/Programs/Windows Explorer**.
2. Double-click **Network Neighborhood** and expand it.

You access the list of the computers in your workgroup.

3. Double-click the computer that is sharing the folders you wish to access.

All shared folders appear.


4.5.4. Windows 98 SE: Sharing a printer

It is possible to put a printer on the network and share it with all computers in the house equipped with a WiFi adapter.



To access a printer on the network, the printer must be set up for sharing on the computer where it is connected and installed.

On the computer connected to the printer:

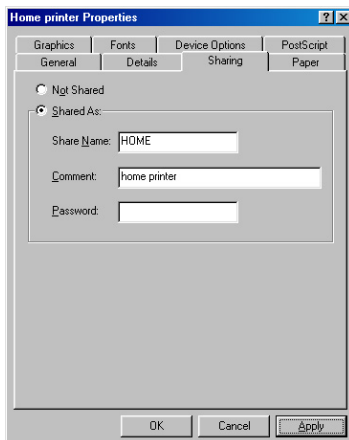

1. Click **Start/Settings/Printers**.
2. Right-click the printer and select **Sharing**.
3. In the **Sharing** tab, select **Shared As** and enter a name for your printer.

Give the printer a name that is unique and sufficiently distinctive, making it easy to recognize (printer or wifi printer, for example).

4. Click **Apply**, then **OK**.




If the **Sharing** tab does not appear, you must enable file sharing.




1. Click **Start/Settings/Control Panel**. Double-click **Network**.
2. In the **Network** window, click the **File and Print Sharing...** button.
3. Tick the **I want to be able to allow others to print to my printer(s)** box.

Windows prompts you to restart your computer.


On the computers that will use the shared printer:

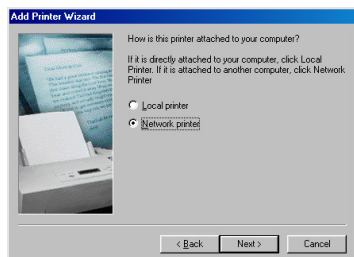

1. Click **Start/Settings/Printers**. Double-click the **Add Printer** icon.
2. The **Add Printer Wizard** is launched. Click **Next**.
3. Select the **Network printer** option, then click **Next**.
4. Click **Browse...** to locate the shared printer.

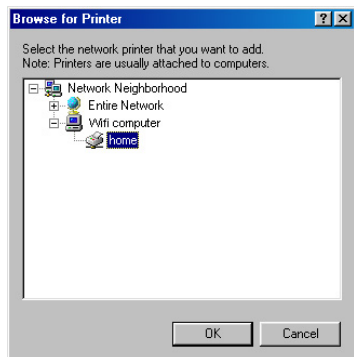

5. In the list displayed, double-click the computer connected to the printer.
6. Select the shared printer, then click **OK**.
7. Click **Next**.

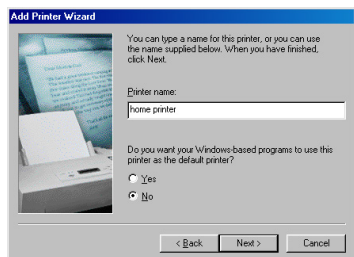


8. If you wish, set the shared printer as the default printer, then click **Next**.
9. Click **Finish** to close the Wizard.


You can now use the network printer thanks to your WiFi connection. For more information on sharing a printer, please refer to your printer's manual.

4.5.5. Windows 98 SE: Sharing an ADSL connection in an Infrastructure network


Proceed as follows for each computer that will use the shared Internet connection:

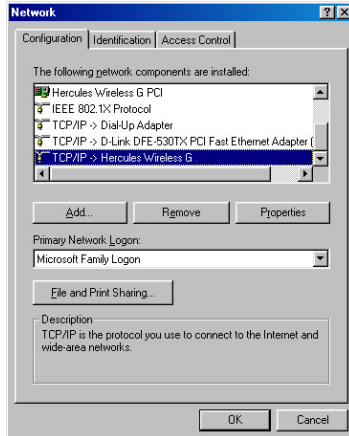

1. Click **Start/Settings/Control Panel**. Double-click **Network**.
2. In the **Configuration** tab of the **Network** window, select the **TCP/IP -> Hercules Wireless G** component.
3. Click **Properties**.

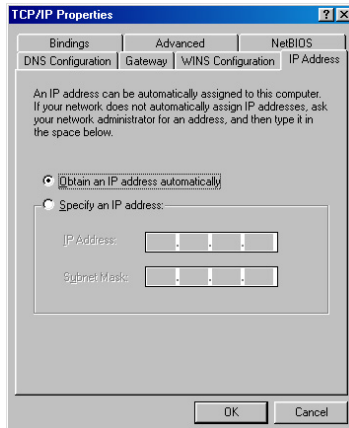

4. In the **IP Address** tab, select **Obtain an IP address automatically**.

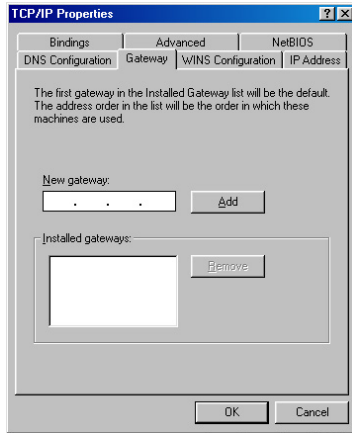

5. In the **Gateway** tab, if there are gateways installed, select them and click **Remove**.
6. Click **OK** to close the windows.

Windows may prompt you to restart your computer.

To access the Internet, you can now simply launch your Internet browser.

4.5.6. Windows 98 SE: Manually enabling or disabling your adapter's WiFi connection (advanced users)

You can manually enable or disable your adapter's WiFi connection for a variety of reasons: to temporarily avoid connecting to networks, save battery power, etc.

To manually enable or disable your Hercules Wireless G adapter's WiFi connection in Windows 98 SE:

- Access the **Device Manager**.
- Select your Hercules Wireless G adapter in the list of network adapters.
- Right-click your adapter and select **Properties**.
- To enable your adapter, select **Enable**. To disable it, select the **Disable** option.

For more information on manually enabling or disabling the adapter in Windows 98 SE, please refer to the Windows online help utility.

5. MANUALLY CONFIGURING YOUR ADSL CONNECTION

WiFi Manager allows you to manually enter your connection settings, which may prove useful if your Internet Service Provider does not appear in the list of included ISPs, or if you are using a specific connection.

5.1. Gathering your ADSL connection settings

On the following page, you will find a **reminder sheet** which, once you have filled it out, will enable you to find **all of your ADSL connection information** at a glance, which may be particularly useful if your Internet Service Provider does not appear in the list, or if you are using a DHCP or static IP connection for which you will be asked to provide additional settings.

To fill in this reminder sheet, arm yourself with a copy of your **confirmation of membership email or letter**, which should contain all of the required information. If some of the information does not appear in your confirmation of membership email or letter, you may have to contact your service provider by telephone in order to get hold of the missing information.

REMINDER SHEET – MY ADSL CONNECTION SETTINGS

Who is your service provider? _____
What is your connection type? (only one possible answer)
1- PPPoE <input type="checkbox"/> 2- PPPoA <input type="checkbox"/> 3- DHCP <input type="checkbox"/> 4- Static IP <input type="checkbox"/>
1- If you are using a <u>PPPoE</u> connection, enter the information below:
Username (Login): _____
Connection password: _____
VPI (0-255): _____ VCI (1-65535): _____
2- If you are using a <u>PPPoA</u> connection, enter the information below:
Username (Login): _____
Connection password: _____
Encapsulation type (or multiplexing): LLC <input type="checkbox"/> VC-Mux <input type="checkbox"/>
VPI (0-255): _____ VCI (1-65535): _____
3- If you are using a <u>DHCP</u> connection, enter the information below:
Encapsulation type (or multiplexing): LLC <input type="checkbox"/> VC-Mux <input type="checkbox"/>
VPI (0-255): _____ VCI (1-65535): _____
4- If you are using a <u>Static IP</u> connection, enter the information below:
IP address: _____ . _____ . _____ . _____
Subnet mask: _____ . _____ . _____ . _____
Default gateway: _____ . _____ . _____ . _____
Preferred DNS server: _____ . _____ . _____ . _____
Auxiliary DNS server: _____ . _____ . _____ . _____
Encapsulation type (or multiplexing): LLC <input type="checkbox"/> VC-Mux <input type="checkbox"/>
VPI (0-255): _____ VCI (1-65535): _____

ENGLISH

FRANÇAIS

DEUTSCH

NEDERLANDS

ITALIANO

ESPAÑOL

5.2. Entering your ADSL connection settings

Your ADSL connection

Configure all settings manually:



Connection type:

- PPPoE
- PPPoA
- StaticIP
- DHCP

If you are configuring a PPPoE connection:

Connection Username (Login):

Connection Password:

VPI :

VCI :

- On the Home page, click **Your ADSL connection**.

- Tick the **Configure all settings manually** box.

*All of the requested information will be found on the **reminder sheet** which you have already filled in (see chapter 5.1. **Gathering your ADSL connection settings**).*

- First off, select your **Connection Type** (PPPoE, PPPoA, DHCP or StaticIP).

- Enter your **Connection Username (Login)** and **Connection password**.

*This information is found in the confirmation of membership email or letter sent to you by your ISP, and is already entered on your **reminder sheet**.*

- Enter the **VPI** (Virtual Path Identifier) and **VCI** (Virtual Circuit Identifier).

The default values are 8 for the VPI and 35 for the VCI.



Once you have configured your connection, don't forget to click the **Apply and Save** button to save your settings. Doing so will establish an Internet connection, which you can then test (please refer to chapter 5.2.1. **Testing your ADSL connection**).

Connection status: Connected

Download speed: 2048 kbps
 Upload speed: 160 kbps
 IP address: 82.228.198.79

- Verify that your modem router is properly connected.

- Have a look at the information in the **Download speed** (transfer speed of Internet data to your computer) and **Upload speed** (transfer speed of data on your computer to the Internet) sections.

This information is quoted in Kilobits per second. A download speed of 1024Kbps is the equivalent of 1 Megabit per second.

- Finally, you will find your computer's **IP address**, which you will need later on in WiFi Manager.

If you are configuring a PPPoA connection:

Connection Username (Login):

- Enter your **Connection Username (Login)** and **Connection password**.

This information is found in the confirmation of membership email or letter sent to you by your ISP, and is already entered on your reminder sheet.

Connection Password:

- Select the **Encapsulation** type: VC MUX or LLC (information provided by your ISP).

Encapsulation :

VPI :

- Enter the **VPI** (Virtual Path Identifier) and **VCI** (Virtual Circuit Identifier).

VCI :

The default values are 8 for the VPI and 35 for the VCI.



Once you have configured your connection, don't forget to click the **Apply and Save** button to save your settings. Doing so will establish an Internet connection, which you can then test (please refer to chapter 5.2.1. **Testing your ADSL connection**).

Connection status: Connected

- Verify that your modem router is properly connected.

Download speed: 2048 kbps
 Upload speed: 160 kbps
 IP address: 82.228.198.79

- Have a look at the information in the **Download speed** (transfer speed of Internet data to your computer) and **Upload speed** (transfer speed of data on your computer to the Internet) sections.

This information is quoted in Kilobits per second. A download speed of 1024Kbps is the equivalent of 1 Megabit per second.

- Finally, you will find your computer's **IP address**, which you will need later on in WiFi Manager.

If you are configuring a DHCP connection:

Assigned IP address:

- The **IP address**, the **subnet mask** and the default gateway are displayed.

Subnet mask:

This information is automatically assigned by your ISP's DHCP server.

Default gateway:

Renew

- If you wish, click the **Renew** button to have the DHCP server assign a new IP address; or

Release

Encapsulation : LLC
LLC
VC-MUX

VPI :

VCI :

- Click **Release** to make the IP address available again, then click **Renew** to have the DHCP server assign a new IP address.

- Select the **Encapsulation** type: VC MUX or LLC (information provided by your ISP).

- Enter the **VPI** (Virtual Path Identifier) and **VCI** (Virtual Circuit Identifier).

The default values are 8 for the VPI and 35 for the VCI.



Once you have configured your connection, don't forget to click the **Apply and Save** button to save your settings. Doing so will establish an Internet connection, which you can then test (please refer to chapter 5.2.1. **Testing your ADSL connection**).

Connection status: Connected

Download speed: 2048 kbps
 Upload speed: 160 kbps
 IP address: 82.228.198.79

- Verify that your modem router is properly connected.

- Have a look at the information in the **Download speed** (transfer speed of Internet data to your computer) and **Upload speed** (transfer speed of data on your computer to the Internet) sections.

This information is quoted in Kilobits per second. A download speed of 1024Kbps is the equivalent of 1 Megabit per second.

- Finally, you will find your computer's **IP address**, which you will need later on in WiFi Manager.

If you are configuring a Static IP connection:

IP address:

Subnet mask:

Default gateway:

Primary DNS server:

Secondary DNS server:

Bridge mode Route mode

Encapsulation : LLC
LLC
VC-MUX

- You must enter the following settings: the **IP address**, the **subnet mask**, the default gateway, the Primary DNS server and the Secondary DNS server.

- Select either **Bridge Mode** or **Route Mode**.

- Select the **Encapsulation** type: VC MUX or LLC (information provided by your ISP).

VPI :
 VCI :

- Enter the **VPI** (Virtual Path Identifier) and **VCI** (Virtual Circuit Identifier).

The default values are 8 for the VPI and 35 for the VCI.



Once you have configured your connection, don't forget to click the **Apply and Save** button to save your settings. Doing so will establish an Internet connection, which you can then test (please see below).

Connection status: Connected

Download speed: 2048 kbps
 Upload speed: 160 kbps
 IP address: 82.228.198.79

- Verify that your modem router is properly connected.

- Have a look at the information in the **Download speed** (transfer speed of Internet data to your computer) and **Upload speed** (transfer speed of data on your computer to the Internet) sections.

This information is quoted in Kilobits per second. A download speed of 1024Kbps is the equivalent of 1 Megabit per second.


- Finally, you will find your computer's **IP address**, which you will need later on in WiFi Manager.

5.2.1. Testing your ADSL connection

Now that your ADSL connection has been configured on your Hercules Modem Router, you can carry out a first test of your connection and verify that you have access to the Internet.



During this test, leave the Ethernet cable connected.



- Launch an Internet browser (Internet Explorer, Netscape Navigator or Mozilla Firefox) on your computer.

- Enter the address **www.hercules.com**.

The Hercules website's home page should be displayed.

If your ADSL connection is working properly:

It is now time for you to learn how to master your WiFi network (please refer to chapter **3.5. Mastering your WiFi network at your fingertips**).



Do not disconnect your Ethernet cable just yet; since your WiFi network has not yet been created, you will still need the cable to communicate with your modem router.

5.2.2. Reconnecting or clearing fields

If you have previously disconnected (by clicking the **Disconnect** button in the WiFi Manager interface), since you did not plan on using your Internet connection for a certain length of time, you can reconnect at any time (by clicking the **Connect** button) and access websites on the Internet again.

Finally, thanks to the **Clear** button, you can clear the information contained in the fields (in case you have made a mistake in entering something or if you change your ISP, for example), and then enter the new information.



You can only store one ISP configuration in the Hercules Modem Router.

6. WIFI MANAGER FOR ADVANCED USERS

WiFi Manager has been designed to respond to the needs of the widest cross-section of the public. Thus, after having explained the most useful functionalities in the previous chapters, we dedicate this chapter to users who wish to take advantage of the subtleties of WiFi, and explore their modem router's more advanced functionalities. **But be careful!** Modifying certain settings may have a negative impact on the proper functioning of your network, and therefore on your modem router. You should bear in mind, however, that nothing is irreversible, and that you can always return to the original configuration or reload a personalized configuration.


6.1. Configuring your WiFi network's advanced options



This window contains the settings which affect the functioning of your Hercules Modem Router. If you do not know their functions, we recommend that you keep the default settings.

Advanced WiFi options

Hide your network name (SSID):

WiFi mode: 

- Mixed
- B only
- G only

Beacon Period: msec

RTS threshold:

- In the **Your WiFi connection parameters** window, click the **Advanced WiFi options** button located in the lower left-hand corner of the window.

- If you do not want the network to broadcast its name, tick the **Hide your network name (SSID)** box.

The SSID is hidden, and the network name is not displayed during detection by a WiFi client (the Network name (SSID) field is blank in Hercules WiFi Station, for example).

Make sure that you do not lose or forget this name, as you will need it to connect your WiFi devices.

- Select the WiFi mode to be used by your modem router: **Mixed**, **B only** or **G only**.

*If you select **B only**, 802.11 G devices will **not** be able to connect.*

*If you select **G only**, 802.11 B devices will **not** be able to connect.*

*If you select **Mixed**, 802.11 **B and G** devices will be able to connect.*

- The **Beacon Period** allows you to define the wireless network detection interval.

- When an **RTS threshold** is defined, the wireless device asks the **access point** for authorization to transmit data, thereby avoiding data arriving simultaneously (risk of collision).

*Modifying the **RTS threshold** may affect your modem router's performance.*

Fragment threshold:

- The **Fragment threshold** consists of defining the size in which data packets are fragmented. If the size is less than the predefined amount, the packet is not fragmented. By contrast, if the size is greater, the packet is fragmented before being transmitted, then reconstituted at the access point.

Fragmentation lets you improve the success of transmissions.

DTIM Period:

- The **DTIM Period** corresponds to the interval between two synchronous frames containing information on the transmission messages.

- Click **OK**, then **Apply and Save** to validate and save your settings.

**Apply and
Save**

*The **access point** restarts. All computers or devices connected via WiFi are disconnected. The ADSL connection, however, remains active.*

6.2. Configuring your Internet firewall

In this chapter, you will learn how to lower certain defenses in order to authorize access to your computers for specific Internet services (P2P, web/FTP servers...), or shore up other defenses to limit access on a specific computer to certain Internet services.

6.2.1. Opening doors in your firewall for certain Internet services

If you would like for your computers to be able to either provide specific Internet services (P2P, web/FTP servers...), or access specific services, you will have to open up mini-drawbridges (referred to as ports) in your firewall using **port forwarding**.

To authorize one or more of your computers for specific Internet services:

Your Internet firewall parameters

Port Forwarding

Select your computer:

- On the Home page, select **Your Internet firewall parameters**.

- Click the **Port Forwarding** button.

- **Select your computer** in the drop-down list.

This list sums up all network devices (Ethernet or wireless) currently connected to your network (with their host name and the IP address assigned to them).



The computer that you wish to authorize for a service must be connected to the network.

Select the type of service provided:

- **Select the type of service provided.**

Select the rule to apply:

- Web Server
- FTP Server
- TELNET Server
- DNS Server
- LDAP Server
- NNTP Server
- SMTP Server
- POP 2 Server
- POP 3 Server
- IMAP Server
- IRC Server
- Lotus Server
- Remotely Possible Server

- **Select the rule to apply** (or create the rule yourself: in this case, please refer to the **To create a new rule** section, coming up).

- Click the **Apply** button.

*The selected rule is added to the **list of rules applied**.*

- Click the **Apply and Save** button to validate your settings.

To view or modify a rule:

Select the type of service provided:

- Select the type of service in the **Port Forwarding** window.

Select the rule to apply:

View/Modify the rule

- Select the rule to view or modify.

This list sums up all available rules.

- Click the **View/Modify the rule** button.

If you have selected a rule created by WiFi Manager :

You can only view this rule; you are not able to modify it.

If you have selected a rule created manually:

The editing window (opposite) is displayed.

- Select the **Protocol** (TCP, UDP or TCP/UDP).

- Enter a value in the **Start port**, **End port** and **Computer's internal port** fields (between 1 and 65536).

*If you only open one port, the **Start port** and the **End port** (external ports) have the same value. The **Computer's internal port** corresponds to the port used by the service provided by the computer and is generally equal to the **Start port**.*

Add

- Click the **Add** button to validate the range and display it in the table, opposite.

- Repeat this procedure for each range of ports you wish to add.

- To remove a range, click the **X** in the **Remove** column next to the range in question.

- Once you have finished modifying the settings for the new rule, click **Apply and Save**.

*The new rule is stored in the **Type of service provided** category, under the name **New**.*

- If you wish to remove this rule from the list of rules to be applied, click the **Remove this rule** button.


Here are the ports opened by this rule:

Protocol	Start port	End port	Computer's internal port	Remove
TCP	13203	13300	13203	X

Remove this rule

To create a new rule:

Create a new rule

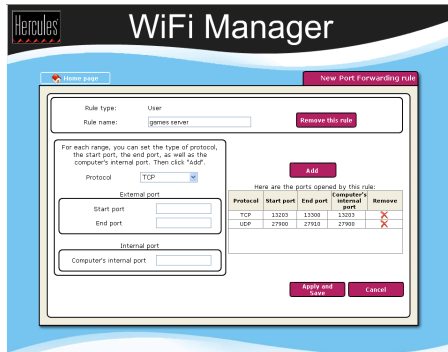

Add

Here are the ports opened by this rule:

Protocol	Start port	End port	Computer's internal port	Remove
TCP	13203	13300	13203	X

- In the **Port Forwarding** window, click the **Create anew rule** button.

The editing window (opposite) is displayed.

- Enter a **name** for the rule.
- Select the **Protocol** (TCP, UDP or TCP/UDP).
- Enter a value in the **Start port**, **End port** and **Computer's internal port** fields (between 1 and 65536).

*If you only open one port, the **Start port** and the **End port** (external ports) have the same value. The **Computer's internal port** is generally equal to the **Start port**.*

- Click the **Add** button to validate the range and display it in the table, opposite.
- Repeat this procedure for each range of ports you wish to add.
- To remove a range, click the **X** in the **Remove** column next to the range in question.
- Once you have finished modifying the settings for the new rule, click **Apply and Save**.

*The new rule is stored in the **Type of service provided** category, under the name **New**.*

To no longer apply a rule to a computer:

Select your computer:

Rules applied to the selected computer:

example
rule1
rule2

Remove from the list

- Select your computer.

- In the **Rules applied to the selected computer** table, select the rule to be removed.

- Click the **Remove from the list** button.

- Once you have finished, click the **Apply and Save** button to validate your settings.

6.2.2.Limiting access of one of your network computers to Internet services

By default, the computers are able to access all Internet services. If you wish to limit access on one specific computer to certain Internet services, however (Internet access, Peer to Peer sites...), you can use the **IP address filtering** system.

To limit access on a specific computer to an Internet service:

Your Internet firewall parameters

IP Filtering

Select your computer:

- On the Home page, select **Your Internet firewall parameters**.

- Click the **IP Filtering** button.

- **Select your computer** in the drop-down list.

This list sums up all network devices (Ethernet or wireless) currently connected to your network (with their host name and the IP address assigned to them).



The computer on which you wish to limit access must be connected to the network.

Select the type of service provided:

Select the rule to apply:

Morpheus
Kazaa
eMule
Gnutella

- **Select the type of service provided**.

- **Select the rule to apply** (or create the rule yourself: in this case, please refer to the **To create a new rule** section, coming up).

- Click the **Apply** button.


*The selected rule is added to the **list of rules applied**.*

- Click the **Apply and Save** button to validate your settings.

To view or modify a rule:

Select the type of service provided:

View/Modify the rule

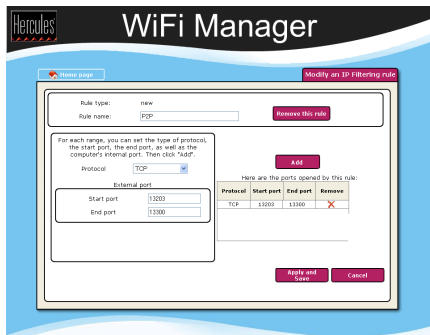

Add

Here are the ports opened by this rule:

Protocol	Start port	End port	Remove
TCP	13203	13300	X
UDP	27900	27910	X

Remove this rule

- Select the type of service in the **IP Filtering** window.

- **Select the rule** to view or modify.

This list sums up all available rules.

- Click the **View/Modify the rule** button.

If you have selected a rule created by WiFi Manager :

You can only view this rule; you are not able to modify it.

If you have selected a rule created manually:

The editing window (opposite) is displayed.

- Select the **Protocol** (TCP, UDP or TCP/UDP).

- Enter a value in the **Start port** and **End port** fields (between 1 and 65536).

*If you only open one port, the **Start port** and the **End port** (external ports) have the same value.*

- Click the **Add** button to validate the range and display it in the table, opposite.

- Repeat this procedure for each range of ports you wish to add.

- To remove a range, click the **X** in the **Remove** column next to the range in question.


- Once you have finished modifying the settings for the new rule, click **Apply and Save**.

*The new rule is stored in the **Type of service provided** category, under the name **New**.*

- If you wish to remove this rule from the list of rules to be applied, click the **Remove this rule** button.

To create a new rule:

Create a new rule

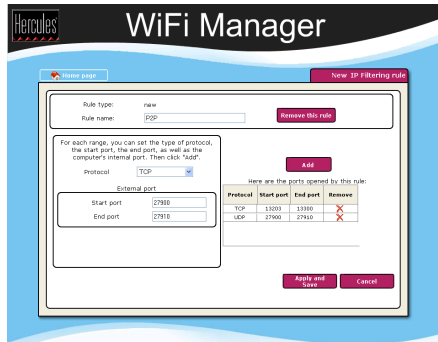

Add

Here are the ports opened by this rule:

Protocol	Start port	End port	Remove
TCP	13203	13300	X
UDP	27900	27910	X

- In the **IP Filtering** window, click the **Create a new rule** button.

The editing window (opposite) is displayed.

- Enter a **name** for the rule.
- Select the **Protocol** (TCP, UDP or TCP/UDP).
- Enter a value in the **Start port** and **End port** fields.

*If you only open one port, the **Start port** and the **End port** (external ports) have the same value.*

- Click the **Add** button to validate the range and display it in the table, opposite.
- Repeat this procedure for each range of ports you wish to add.
- To remove a range, click the **X** in the **Remove** column next to the range in question.
- Once you have defined the settings for the new rule, click **Apply and Save**.

*The new rule is stored in the **Type of service provided** category, under the name **New**.*

To no longer apply a rule to a computer:

Select your computer: Portable - 192.168.1.7

Remove from the list

Rules applied to the selected computer:

```
example
rule1
rule2
```

- **Select your computer.**
- In the **Rules applied to the selected computer** table, select the rule to be removed.
- Click the **Remove from the list** button.
- Once you have finished, click the **Apply and Save** button to validate your settings.

6.3. A toolbox with multiple facets

WiFi Manager functions as a toolbox which can help you to correct any mistakes you might make.

6.3.1. Restarting the Hercules Modem Router

The **Restart the modem router** function cuts off all of the Hercules Modem Router's functions (WiFi and ADSL connection, firewall, router) and restarts WiFi Manager.



All computers or devices connected via WiFi or Ethernet will be disconnected.

To restart the modem router:

Toolbox

- On the Home page, click the **Toolbox** button.

Restart the modem router

- Select **Restart the modem router**.

An explanatory text details the function of this button.

Restart now

- Click the **Restart now** button.



The modem router restarts with the last settings saved. No data is lost.

6.3.2. Restarting the WiFi function

If your WiFi devices are having trouble connecting to the modem router, you can use the **Restart the WiFi function** option.



All computers or devices connected via WiFi will be disconnected. The ADSL connection, however, remains active.

To restart the WiFi function:

Toolbox

- On the Home page, click the **Toolbox** button.

Restart the WiFi function

- Select **Restart the WiFi function**.

An explanatory text details the function of this button.

Restart the WiFi function now

- Click the **Restart the WiFi function now** button.



The modem router restarts with the last settings saved. No data is lost.


6.3.3. Loading/Saving your settings

Thanks to WiFi Manager, you can quickly load or save your personalized settings.



Before loading any settings, you must make sure that you have already saved your settings in a file.

To save your settings:



- On the Home page, click the **Toolbox** button.

- Select **Load/Save your settings**.


- Click the **Save your settings in...** button.

- Select a location, and then enter a name.

- Click **OK**.

Your settings file is saved in .bin format.

To load your settings:



- On the Home page, click the **Toolbox** button.

- Select **Load/Save your settings**.

- Click the **Browse...** button.

- Select your settings file (in .bin format), and then click **Open**.

- Click **Load**.

Your Hercules Modem Router now applies the loaded ADSL, WiFi... settings.

6.3.4. Restoring your original settings

If you have modified certain settings – whether intentionally or not – and wish to restore the original settings, follow the instructions below.



During the restoration, all settings that you have previously modified (Internet connection settings, WiFi security key, filtering by MAC address...) will be lost!

Toolbox

- On the Home page, click the **Toolbox** button.


Restore original settings

- Select **Restore original settings**.

Restore now

- Click the **Restore now** button.

You can also use the Reset button located on the router:

- With the modem router switched on, press the **Reset button**  for 10 seconds.

- Release the button.

Your modem router will load its original settings and reinitialize itself.

6.3.5. Updating the modem router's firmware

If you wish to take advantage of new functionalities or improved functionalities for your Hercules Modem Router, we recommend that you regularly visit the www.hercules.com website to check whether any firmware updates are available.



We strongly recommend that you carry out firmware updates while connected by the gray Ethernet cable (and not via WiFi).



During the update, all settings that you have previously modified (Internet connection settings, WiFi security key...) will be lost!

If a firmware update is available:

- On the www.hercules.com website, click **Support/Updates and Downloads**.

- Follow the on-screen instructions provided. Then:

Toolbox

- On the WiFi Manager Home page, click the **Toolbox** button.

ENGLISH

FRANÇAIS

DEUTSCH

NEDERLANDS

ITALIANO

ESPAÑOL

Update firmware

C:\update.img **Browse...**

Update

- Select **Update firmware**.
- Click the **Browse...** button.
- Select your firmware file, then click **Open**.
- Click **Update** to import the data.

Your Hercules Modem Router will now use this new firmware version.

6.4. Other advanced options

6.4.1. Configuring the DHCP server

This chapter will show you how to configure the internal DHCP server, which manages your computers' IP addresses.

Advanced settings

Modem router addressing

Obtain an IP address automatically

IP Router address:

Subnet mask:

- On the Home page, click the **Advanced settings** button.

- Select **Modem router addressing**.

- You can modify the **IP Router address** (192.168.1.1, by default) and its **Subnet mask** (255.255.255.0, by default).

- If you would like this address to be obtained automatically from another DHCP server, tick the **Obtain an IP address automatically** box.



Make absolutely sure to write down this IP address! Without it, you will not be able to reconnect to your router.

DHCP server configuration :

Internal DHCP server enabled

Start IP address:

End IP address:

Validity duration: minutes

DHCP relay from:

Internal server and Relay disabled

- If you leave the **Internal DHCP server enabled** box ticked, you can modify the **Start IP address** (192.168.1.2, by default), the **End IP address** (192.168.1.254, by default) and the **Validity duration** (60 minutes, by default) of these addresses.

- If you tick the **DHCP relay from** box, the modem is no longer the DHCP server, but only a relay. The IP addresses of your network devices, instead of being assigned by the modem, are now assigned by another DHCP server whose address you have entered (provided by the network administrator).


- If you tick the **Internal server and Relay disabled** box, you as a user decide to now assign the IP address for each computer yourself.

6.4.2. Managing the IP addresses of local network computers

This chapter will show you how to **reserve IP addresses** for computers in your local network. In this way, these computers will always be assigned the same IP address, even after restarting. This kind of address reservation is necessary if you wish to manually apply firewall rules to specific computers that were not connected at the time when the rules were applied (and therefore not visible in WiFi Manager).

Note: if you have applied rules in the **Firewall** chapter, these IP addresses were reserved automatically when the computers were connected.

To reserve an IP address:

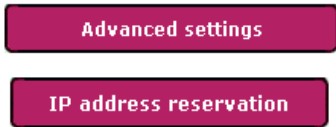

- On the Home page, click the **Advanced settings** button.

- Select **IP address reservation**.

Manual IP Address:			
Click to reserve	IP address to reserve:	Computer name:	Associated MAC address
<input type="button" value="R"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

If you wish to manually reserve an IP address for a computer that is not currently connected:

- Enter its **computer name**, as well as its **IP address** and its **MAC address**.

- Click **Reserve**.

The computer is added to the list of reserved IP addresses.

If you wish to reserve the IP address of a computer that is currently connected:

- Select the computer in the list of **IP addresses dynamically assigned by the router**, which contains all of the computers and devices currently connected.

- Click **R** next to the computer to be reserved.

The computer is added to the list of reserved IP addresses.

IP addresses dynamically assigned by the router:			
Click to reserve	IP address	Computer name:	Associated MAC address
<input type="button" value="R"/>	192.168.1.7	girdtest138	00:05:5d:0a:9b:13

To free up an IP address:

Reserved IP addresses:

Remove	IP address	Computer name:	Associated MAC address
<input type="button" value="X"/>	192.168.1.4	Portable	00:08:d3:05:00:17


- In the list of **Reserved IP addresses** that you have created, click **X** next to the IP address you wish to free up.

The address is removed from the list.

6.4.3. Enabling/Disabling UPnP

The **UPnP** (Universal Plug n' Play) function, when enabled, allows the computers in your network which use this technology to detect and execute the services available on the network (Internet communications, multimedia server...).

To access the UPnP function:




- On the Home page, click the **Advanced settings** button.

- Select **UPnP**.

6.4.4. Controlling your Hercules Modem Router from a remote location via the Internet

WiFi Manager's **Control from a remote location** function allows a computer outside of your local network to connect to the Hercules Modem Router and configure it.

To authorize remote control of your modem router:

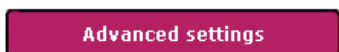

Remote control enabled:

IP address of remote computer:	<input type="text" value="82"/>	<input type="text" value="228"/>	<input type="text" value="198"/>	<input type="text" value="99"/>
--------------------------------	---------------------------------	----------------------------------	----------------------------------	---------------------------------

- On the Home page, click the **Advanced settings** button.

- Select **Control from a remote location**.

- Tick the **Remote control enabled** box.

- Enter the **IP address of the remote computer** that will access the modem router.

- Click the **Apply and Save** button to validate your settings.

To access your modem router remotely, you must enter your ADSL connection's public IP address, established by your ISP, in the Internet browser of the remote computer.

To find out your public IP address, open the **Your ADSL connection** window (click the **Your ADSL connection** button on the Home page). The IP address is displayed in the lower right-hand corner.

6.4.5. Changing the Hercules Modem Router's password

For reasons of confidentiality or security, you may wish to change your **password**. WiFi Manager allows you to select a new password when you are connecting (please refer to chapter **3.2. Changing the WiFi Manager password**) or via the Advanced settings window (see below).

You can also specify an automatic disconnection after a certain period of inactivity, if you ever forget to disconnect manually, for example. This will prevent any external computers from accessing your network.

To change the password or define a period of inactivity:

Advanced settings

Password

Your new password:

Confirm your new password:

Time before disconnecting: minutes

- On the Home page, click the **Advanced settings** button.

- Select **Password**.

- Enter **Your new password**, and then confirm it.

- In the **Time before disconnecting** section, define a period of inactivity after which the computer will be automatically disconnected from the modem router.

- Click the **Apply and Save** button to validate your settings.

6.5. Product information

WiFi Manager allows you to consult all information relating to the functioning of your Hercules Modem Router.

To consult the product information:

Product information

- On the Home page, click the **Product information** button.

*The following information is displayed: the Hercules Modem Router's **MAC address**, the status of the **ADSL** connection, of the local area network and of the wireless network, as well as the firmware and hardware versions.*

ENGLISH

FRANÇAIS

DEUTSCH

NEDERLANDS

ITALIANO

ESPAÑOL

7. GLOSSARY

802.11

Standard established in 1997 by the IEEE (Institute of Electrical and Electronics Engineers, an American organization), defining wireless networks in the 2.4 – 2.48GHz frequency range and offering transfer speeds of between 1 and 2Mbits/s. Revisions have been made to the original standard in order to optimize transfers (this is the case for the 802.11a, 802.11b and 802.11g standards, referred to as physical 802.11 standards) or to ensure better security or improved interoperability of equipment.

802.11b

Standard established by the IEEE (Institute of Electrical and Electronics Engineers, an American organization) in the 802.11 family, allowing for theoretical transfer rates of 11Mbits/s in the 2.4GHz frequency range with a physical range of up to 300m in an environment free from obstructions. The frequency range used is the 2.4GHz band, with 3 radio channels available.

802.11g

Standard established by the IEEE (Institute of Electrical and Electronics Engineers, an American organization) in the 802.11 family, allowing for theoretical transfer rates of 54Mbits/s in the 2.4GHz frequency range with a physical range of up to 300m in an environment free from obstructions. The 802.11g standard offers backwards compatibility with the 802.11b standard, which means that equipment compliant with the 802.11g standard will also work with 802.11b.

802.11i

Standard established by the IEEE (Institute of Electrical and Electronics Engineers, an American organization) in the 802.11 family, whose goal is to improve security by integrating WPA-PSK authentication into AES encryption. This Hercules client is compatible with this standard.

Access point

The access point is the heart of your local WiFi network. The system access point is a wireless router whose function is to bring several clients together, which is to say link together all computers equipped with WiFi adapters, thanks to its radio antenna.

Ad hoc mode

Mode allowing several computers equipped with WiFi to communicate directly with one another. This mode is also referred to as Peer to Peer.

ADSL (Asymmetric Digital Subscriber Line)

This equipment, connected to a standard telephone line, offers great speed in terms of sending and receiving data.

AES (Advanced Encryption Standard)

A symmetrical block-based encryption standard supporting different key lengths, this is a powerful, quick and efficient encryption method.

ATM (Asynchronous Transfer Mode)

High-speed transfer mode for fixed-size data.

CCK (Complementary Code Keying)

Advanced encoding scheme for radio waves in wireless networks allowing for high transfer speeds.

Client

Computer equipped with a PCI, USB or PCMCIA WiFi adapter.

DHCP (Dynamic Host Configuration Protocol)

Protocol managing the allocation of IP addresses to computers.

DSSS (Direct Sequence Spread Spectrum)

Technique for using radio frequencies in broad-spectrum wireless networks meant to increase the range of transmissions.

ESSID (Service Set Identifier)

8 to 32-character identifier, often abbreviated as SSID, serving as the unique name for a network shared by clients and the access point.

Ethernet port (or RJ-45)

Port allowing for the connection of two devices via a cable, such as a PC and a router, in order to exchange data packets without collision.

Filter

Device placed between the telephone plug and the modem to improve the quality of telephone communications, which are often degraded by ADSL signals.

Firewall

Combination of software and security devices protecting a network connected to the Internet.

Infrastructure mode

Communication mode consisting of grouping together several computers equipped with WiFi in a network via a wireless access point such as the Hercules ADSL router.

IP address

Unique computer address assigned by the router. Each computer has its own IP address, allowing it to be identified within the network.

LEAP (Lightweight Extensible Authentication Protocol)

Security protocol developed by the company Cisco for the world of Windows. The format used is identifier/password.

MAC address (Message Authentication Code)

Unique address created by the builder of the client adapter or router, serving to identify this element within a network.

NAT (Network Address Translation)

Technique allowing for the masking of IP addresses of local area network computers with respect to the Internet.

OFDM (Orthogonal Frequency Division Multiplexing)

Radio transmission technique providing very high transfer speeds widespread within DSL technology, in the wireless terrestrial distribution of television signals and adopted for the high-speed 802.11 wireless communication standard.

PPPoA (Point-to-Point Protocol over ATM)

Protocol allowing for connection to the Internet of computers linked over an ATM network, while still identifying the user.

PPPoE (Point-to-Point Protocol over Ethernet)

Protocol allowing for connection to the Internet of computers linked over an Ethernet network via a high-speed modem.

Static IP

Permanent IP address assigned to a computer by the service provider.

Subnet mask

Part of an IP address indicating the class of the network used (class C, type 255.255.255.0 for a local area network).

TKIP (Temporal Key Integrity Protocol)

The WPA standard uses the TKIP protocol, which consists of regenerating new keys for each data packet, whereas WEP uses a system based on a fixed key.

UPnP (Universal Plug n' Play)

Protocol allowing for the connection to one another of many computers and peripherals available on a network.

WEP (Wired Equivalent Privacy)

Security protocol for wireless networks using encryption based on a 64-bit, 128-bit or 256-bit fixed key used only once, at the start of the decryption phase. To decode a transmission, each wireless network client must use the same 64, 128 or 256-bit key. WEP is part of the 802.11 standard with a view to ensuring authentication (access is only authorized for those who know the WEP key) and confidentiality (encryption). An encryption key is composed of numbers 0 to 9 and letters A to F (example: A123BCD45E).

WiFi (Wireless Fidelity)

An abbreviation of Wireless Fidelity, WiFi is the commercial name adopted by the WECA (Wireless Ethernet Compatibility Alliance), an organization responsible for maintaining the interoperability of equipment in a wireless local area network (WLAN) compliant with the IEEE 802.11 standard. Thus, a WiFi network is actually a 802.11 network. In practice, WiFi allows for the connection of laptop computers, desktop computers or Personal Digital Assistants (PDAs) many tens of meters distant from one another via an access point, allowing them to communicate with one another without any cables and exchange data at high speeds.

WiFi Manager

Utility developed by Hercules to configure and view settings for the Hercules Wireless G Modem Router.

WiFi Router

Device installed at the heart of a WiFi network, allowing for the connection of several computers equipped with WiFi adapters for the exchange of data.

WiFi Station

Utility developed by Hercules to define, verify and configure all connection and security settings regarding your WiFi installation.

WLAN (Wireless Local Area Network)

Wireless local area network, generally employing the 802.11b or g standard.

Workgroup

Group of computers with which you wish to communicate or share resources such as folders, a printer or an Internet connection. To be part of a workgroup, computers must have the same group name.

WPA (WiFi Protected Access)

Wireless network security standard put in place by manufacturers, employing a data encryption algorithm relying on dynamic key management, which was lacking in WEP, the difference being that once communication is established, the key changes randomly for enhanced security.

WPA-PSK (WiFi Protected Access-Pre-Shared Key)

Latest-generation heightened security protocol specially designed for use in environments such as a small office or the home, based on a pre-shared key (a single password). This key is also used for TKIP or AES data encryption.

Log on now to our website (www.hercules.com) to download the latest driver and software versions, consult the list of Frequently Asked Questions (FAQs) relating to your product and access User Manual updates. You can also discover the entire Hercules range and get information on upcoming products.

8. TECHNICAL SUPPORT

If you encounter a problem with your product, please go to <http://ts.hercules.com> and select your language. From there you will be able to access various utilities (Frequently Asked Questions (FAQ), the latest versions of drivers and software) that may help to resolve your problem. If the problem persists, you can contact the Hercules products technical support service ("Technical Support"):

By email:

In order to take advantage of technical support by email, you must first register online. The information you provide will help the agents to resolve your problem more quickly.

Click **Registration** on the left-hand side of the Technical Support page and follow the on-screen instructions.

If you have already registered, fill in the **Username** and **Password** fields and then click **Login**.

By telephone:

United Kingdom	084 5080 0942	price of a national phone call, Monday to Friday from 12PM to 4PM and from 5PM to 10PM
-----------------------	---------------	--

9. WARRANTY

Worldwide, Guillemot Corporation S.A. ("Guillemot") warrants to the consumer that this Hercules product will be free from material defects and manufacturing flaws for a period of two (2) years from the original date of purchase. Should the product appear to be defective during the warranty period, immediately contact Technical Support, who will indicate the procedure to follow. If the defect is confirmed, the product must be returned to its place of purchase (or any other location indicated by Technical Support).

Within the context of this warranty, the consumer's defective product will, at Technical Support's option, be either repaired or replaced. Where authorized by applicable law, the full liability of Guillemot and its subsidiaries (including for indirect damages) is limited to the repair or replacement of the Hercules product. The consumer's legal rights with respect to legislation applicable to the sale of consumer goods are not affected by this warranty.

This warranty shall not apply: (1) if the product has been modified, opened, altered, or has suffered damage as a result of inappropriate or abusive use, negligence, an accident, normal wear, or any other cause not related to a material defect or manufacturing flaw; (2) in the event of failure to comply with the instructions provided by Technical Support; (3) to software not published by Guillemot, said software being subject to a specific warranty provided by its publisher.

10. ENVIRONMENTAL PROTECTION RECOMMENDATION

At the end of its working life, this product should not be disposed of with standard household waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) for recycling.

This is confirmed by the symbol found on the product, user manual or packaging.



Depending on their characteristics, the materials may be recycled. Through recycling and other forms of processing Waste Electrical and Electronic Equipment, you can make a significant contribution towards helping to protect the environment.

Please contact your local authorities for information on the collection point nearest you.

Trademarks

Guillemot™ and Hercules® are trademarks and/or registered trademarks of Guillemot Corporation S.A. Wireless Attitude™ is a trademark of Guillemot Corporation S.A. Microsoft® Windows® 98 SE, Millennium, 2000, XP are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Intel® and Pentium® are registered trademarks of Intel Corporation. All other trademarks and brand names are hereby acknowledged and are property of their respective owners. Illustrations not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another.

Declaration of Conformity

EUROPEAN USERS:

This equipment has been tested and found to comply with Directive 1999/5/CE of the European Parliament and of the Council on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. After assessment, the equipment has been found to comply with the following standards: EN 300.328 (radio), EN 301 489-1, EN 301 489-17 (electromagnetic compatibility) and EN 60950 (safety). This equipment may be used in all European Union countries and in all countries applying Directive 1999/5/CE, without restriction, with the exception of the following countries:

FRANCE:

When this equipment is used outdoors, output power is limited to within the frequency bands listed below. For more information, consult the ART website: www.art-telecom.fr.

Location	Frequency band (MHz)	Power (EIRP)
Indoor (no restrictions)	2400 – 2483.5	100mW (20dBm)
Outdoor	2400 – 2454	100mW (20dBm)
	2454 – 2483.5	10mW (10dBm)

Operation of this equipment in a residential environment may give rise to radio interference; if so, it is incumbent upon the user to rectify the situation.

ITALY:

This device complies with the National Radio Interface and the requirements of the Frequency Allocation Table. Use of this wireless product outside of the boundaries of the owner's property requires a general authorization. For more information, consult the website www.comunicazioni.it.

Copyright

© Guillemot Corporation S.A. 2005. All rights reserved.

This publication may not be reproduced in whole or in part, summarized, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, photocopying, recording, manual or otherwise, without the prior written permission of Guillemot Corporation S.A.

Disclaimer

Guillemot Corporation S.A. reserves the right to make changes to specifications at any time and without notice. The information provided by this document is believed to be accurate and reliable. However, no responsibility is assumed by Guillemot Corporation S.A. either for its use or for the infringement of patents or other rights of third parties resulting from its use. This product may exist in a light or special version for PC integration or other purposes. Certain functions detailed in this manual may not be available in these versions. Wherever possible, a README.TXT will be included on the installation CD-ROM detailing the differences between the supplied product and the product described in the present documentation.

End-user software license Agreement

IMPORTANT: please read the Agreement carefully prior to opening and installing the Software. By opening the Software package, you agree to be bound by the terms of this Agreement. The Software enclosed in this package is licensed, not sold, and is only available under the terms of the present license Agreement. If you do not agree with the terms hereafter, you must promptly return the Software within 15 days, together with the entire contents of the box, to the place of purchase.

The Guillemot Corporation S.A. Software (hereafter named the "Software") is copyrighted by Guillemot Corporation S.A. All rights are reserved. The term "Software" refers to all documentation and related material, including drivers, executable programs, libraries and data files. The purchaser is granted a license to use the Software only. The licensee also agrees to be bound by the terms and conditions of the present Agreement concerning copyright and all other proprietary rights for any third party Software, documentation and related material included in the Software package.

Guillemot Corporation S.A. reserves the right to terminate this license in the event of failure to comply with any of the terms or conditions laid out in the present Agreement. On termination, all copies of the Software shall immediately be returned to Guillemot Corporation S.A.; the purchaser remaining liable for any and all resulting damages.

License:

- The license is granted to the original purchaser only. Guillemot Corporation S.A. retains all title to and ownership of the Software and reserves all rights not expressly granted. The licensee is not permitted to sub-license or lease any of the rights that are hereby granted. Transfer of the license is permitted, provided that the transferor does not retain any part or copy of the Software and the transferee accepts to be bound by the terms and conditions of the present Agreement.
- The licensee may only use the Software on a single computer at any time. The machine-readable portion of the Software may be transferred to another computer provided it is previously erased from the first machine and there is no possibility that the Software can be used on more than one machine at any one time.
- The licensee acknowledges the copyright protection belonging to Guillemot Corporation S.A. The copyright notice must not be removed from the Software, nor from any copy thereof, nor from any documentation, written or electronic, accompanying the Software.
- The licensee is granted the right to make one back-up copy of the machine-readable portion of the Software on the condition that all copyright and proprietary notices are also reproduced.
- Except where the present Agreement expressly permits, the licensee is strictly prohibited from engaging in, nor may he permit third parties to engage in, the following: providing or disclosing the Software to third parties; providing use of the Software in a network, multiple PCs, multi-user or time-sharing arrangement where the users are not individual licensees; making alterations or copies of any kind of the Software; making any attempt to disassemble, de-compile or reverse engineer the Software in any way or form, or engaging in any activity aimed at obtaining underlying information not visible to the user during normal use of the Software; making copies or translations of the User Manual.